


KINGSLEY – BATE

Fine Garden Furniture


ASSEMBLY INSTRUCTIONS FOR THE AM - 10

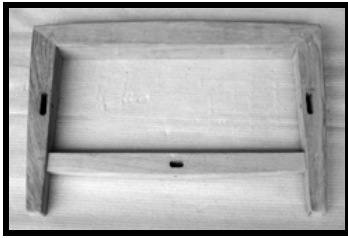

END FRAME




SEAT

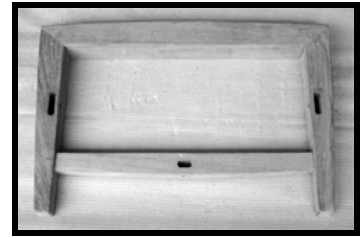

END FRAME



FRAME STRETCHER

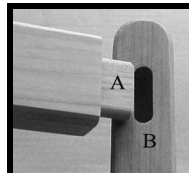

***NOTE**

A TENON

B MORTISE HOLE

STEP-I

Unpack, inspect and lay the parts on a clean, flat, soft surface to avoid marring the wood.

NOTE: During assembly of the furniture please match all joints with the corresponding letters or numbers stamped on the furniture.



STEP-II

Find the END FRAME with the numbers or letters stamped on it and lay it down first. Fit the SEAT tenons into the END FRAME mortise holes as shown in the photo. Also fit the FRAME STRETCHER into the same END FRAME.



STEP-III

Carefully fit the remaining END FRAME mortise holes over all the exposed tenons.



STEP-IV

Hammer the dowels into all the pre-drilled holes of the assembly as shown in the photo. Use the sanding block between the hammer and the dowels for the last few blows to prevent marring of the wood. **DO NOT FORCE DOWELS ANY PROTRUDING DOWEL CAN EASILY BE SANDED DOWN.**

IF YOU HAVE ANY QUESTIONS REGARDING THE ASSEMBLY OF YOUR KINGSLEY-BATE FURNITURE, PLEASE CONTACT THE KINGSLEY-BATE DEALER NEAREST TO YOU OR KINGSLEY-BATE DIRECTLY. WE THANK YOU FOR CHOOSING OUR FURNITURE.

** KINGSLEY-BATE WILL NOT TAKE RESPONSIBILITY FOR DAMAGE
IF THESE INSTRUCTIONS ARE NOT FOLLOWED PROPERLY*