KINGSLEY-BATE

Fine Garden Furniture ASSEMBLY INSTRUCTIONS FOR THE AM-15











SEAT



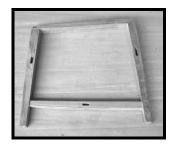

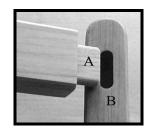

*NOTE: A TENON **B MORTISE HOLE**

RIGHT END FRAME

LEFT END FRAME

STEP-I

Unpack, inspect and lay the parts on a clean, flat, soft surface to avoid marring the wood. NOTE: During assembly of the furniture please match all joints with the corresponding letters or numbers stamped on the furniture.



STEP-II

Find the END FRAME with numbers stamped next to the mortise holes and carefully lay it down. Matching the numbers, gently slide the BACK STRETCHER, BOTTOM LEG STRETCHER and the SEAT into place. If necessary, gently rock the parts while pushing the tenons into the mortise holes until joints fit snugly together.



STEP-III

Carefully fit the remaining END FRAME mortise holes over and onto the remaining SEAT. **BACK STRETCHER** and **BOTTOM LEG** STRETCHER tenons as shown in the assembly photo.





STEP-IV

Using a hammer, drive the dowels into the END FRAMES to secure the SEAT and BOTTOM LEG STRETCHER. We suggest that you use a block of wood between the hammer and the dowel head for the last few blows. This will reduce the chances of marring the wood.



STEP-V

Again, using a hammer, drive the remaining dowels to secure the BACK STRETCHER to the END FRAMES as seen in the photograph.







STEP-VI

Carefully slide the BACK into place as shown in the photograph. Secure the BACK to the BACK STRETCHER by using a proper screwdriver and the wood screws provided. Cover the holes with the teak plugs provided.

NOTE: USE OF A POWER SCREWDRIVER MAY STRIP THE WOOD, PLEASE USE A HAND HELD SCREWDRIVER FOR STEP-VI.



STEP-VII

Tip the chair onto its front legs and secure the BACK to the SEAT with the knock down bolts provided. Again, please use a proper screwdriver. A power screwdriver or a drill with a screwdriver bit could cause damage to the chair. DO NOT FORCE DOWELS FURTHER THAN THEY WANT TO GO. Any protruding dowels, can easily be sanded away.

IF YOU HAVE ANY QUESTIONS REGARDING THE ASSEMBLY OF YOUR KINGSLEY-BATE FURNITURE, PLEASE CONTACT THE KINGSLEY-BATE DEALER NEAREST TO YOU OR KINGSLEY-BATE DIRECTLY. WE THANK YOU FOR CHOOSING OUR FURNITURE.

*KINGSLEY-BATE WILL NOT TAKE RESPONSIBILITY FOR DAMAGE IF THESE INSTRUCTIONS ARE NOT FOLLOWED PROPERLY.

7200 Gateway Court, Manassas, Virginia 20109 Phone: 703-361-7000, Fax: 703-361-7001