

KINGSLEY-BATE

Fine Garden Furniture


ASSEMBLY INSTRUCTIONS FOR THE CH-25



BACK




FRONT STRETCHER

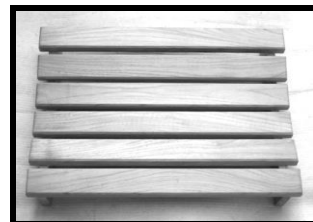


SEAT



RIGHT END FRAME

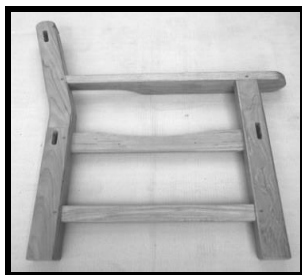

LEFT END FRAME

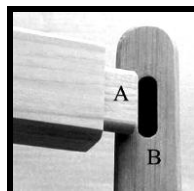

*** NOTE**
A TENON
B MORTISE HOLE

STEP-I

Unpack, inspect and lay the parts on a clean, flat, soft surface to avoid marring the wood.

NOTE: During assembly of the furniture please match all joints with the corresponding letters or numbers stamped on the furniture.



STEP-II

Find the END FRAME with the numbers or letters stamped near the mortise holes and lay it down first. Fit the BACK tenons into the END FRAME mortise holes. If necessary, gently rock the BACK while pushing the tenons into the mortise holes until the joints fit snugly together.



STEP-III

Place SEAT against END FRAME as shown in the assembly photograph. The SEAT will have a stamped letter or number on the seat brace underneath the slats. Use it to make sure the SEAT is not put in backwards.



STEP-IV

Place the FRONT STRETCHER tenon into the END FRAME mortise hole. Make sure rounded edge of the FRONT STRETCHER is facing up. If necessary, gently rock the FRONT STRETCHER while pushing down until all joints fit snugly together.



STEP-V

Fit the remaining END FRAME mortise holes over and onto the BACK and the FRONT STRETCHER tenons. Using a rubber mallet or regular hammer with a wood block between the hammer and the wood, drive the tenons and mortise holes together until all the joints fit snugly. PLEASE BE CAREFUL SO THAT YOU DO NOT MAR THE WOOD.



STEP-VI

Carefully hammer the dowels into their respective predrilled holes as shown in the photographs. Make sure not to hit other parts of the bench. To avoid

dimpling the wood, we suggest that you place a block of wood between the dowel head and the hammer head for the last few blows. If the dowels are not completely flush, use a saw to cut the ends and then use sandpaper to smooth the tops. *** DO NOT FORCE THE DOWELS ***



STEP-VII

Insert brass screws into respective pre-drilled SEAT holes (see photograph). Please use a proper screwdriver. Using a power screwdriver or a drill with a screwdriver bit could drive the screw to deep or even through the END FRAME.



STEP-VIII

Attach the decorative brackets to the END FRAMES and to the FRONT STRETCHER. Make sure the longest end of the bracket fits under the FRONT STRETCHER. Brackets are for decorative use only.

IF YOU HAVE ANY QUESTIONS REGARDING THE ASSEMBLY OF YOUR KINGSLEY-BATE FURNITURE, PLEASE CONTACT THE KINGSLEY-BATE DEALER NEAREST TO YOU OR KINGSLEY-BATE DIRECTLY. WE THANK YOU FOR CHOOSING OUR FURNITURE.

** KINGSLEY-BATE WILL NOT TAKE RESPONSIBILITY FOR DAMAGE
IF THESE INSTRUCTIONS ARE NOT FOLLOWED PROPERLY*