

KINGSLEY-BATE

Fine Garden Furniture

ASSEMBLY INSTRUCTIONS FOR THE CH-40/50




RIGHT END FRAME




BACK



LEFT END FRAME

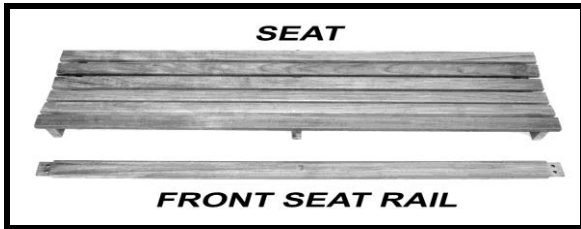

SEAT

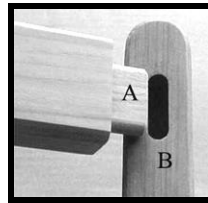

* NOTE :

A TENON

B MORTISE HOLE

STEP-I

Unpack, inspect and lay the parts on a clean, flat, soft surface to avoid marring the wood.

NOTE : During assembly of furniture please match joints with the corresponding letters or numbers stamped near the joints.



STEP-II

Carefully lay the END FRAME with the stamps on a clean, flat surface and fit the BACK tenons into the END FRAME mortise holes as shown. If necessary, gently rock the BACK while pushing the tenons into the mortise holes until joints fit snugly together.



STEP-III

Place SEAT against END FRAME as shown on assembly photo and insert back center SEAT support tenon into bottom rail of BACK mortise hole.



STEP-IV

Place FRONT SEAT RAIL tenon into end frame mortise hole (make sure rounded edge of FRONT SEAT RAIL is facing up). Place center SEAT support tenon into FRONT SEAT RAIL mortise hole.



STEP-V

Fit the remaining END FRAME mortise holes over and onto all exposed tenons as shown in photo. Using a rubber hammer or regular hammer with a wood block between the hammer and the wood, drive the tenons and mortise holes together until all joints fit snugly. NOTE: Upright bench by LIFTING and SETTING down, tilting bench over while dowels are not secured could cause damage to the bench.



STEP-VI


Hammer dowels into respective joints making sure not to hit other parts of the bench. To avoid dimpling the wood, we suggest you place a block of wood between the dowel

head and the hammer head on the last few blows. If dowels are not completely flush, use a saw to cut the ends and then sandpaper to smooth the tops. DO NOT FORCE DOWELS FURTHER THAN THEY WILL GO.



STEP-VII

Insert brass screws into respective pre-drilled holes under the SEAT as shown in the photo. Do not hammer in the screws, but drive them in with a proper screw driver; use of a power screw driver could easily strip the holes.

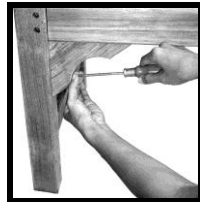

STEP-VIII

Attach the decorative brackets to the END FRAMES and to the FRONT STRETCHER. Make sure the longest end of the bracket fits under the FRONT STRETCHER. Brackets are for decorative use only.

IF YOU HAVE ANY QUESTIONS REGARDING THE ASSEMBLY OF YOUR KINGSLEY-BATE FURNITURE, PLEASE CONTACT THE KINGSLEY-BATE DEALER NEAREST TO YOU OR KINGSLEY-BATE DIRECTLY. WE THANK YOU FOR CHOOSING OUR FURNITURE.

**KINGSLEY-BATE WILL NOT TAKE RESPONSIBILITY FOR DAMAGE
IF THESE INSTRUCTIONS ARE NOT FOLLOWED PROPERLY.*

7200 Gateway Court, Manassas, Virginia 20109
Phone: 703-361-7000, Fax: 703-361-7001