



KINGSLEY-BATE

Fine Garden Furniture

ASSEMBLY INSTRUCTIONS FOR THE CO-14

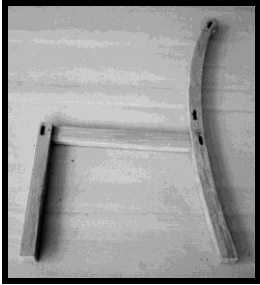


RIGHT END FRAME

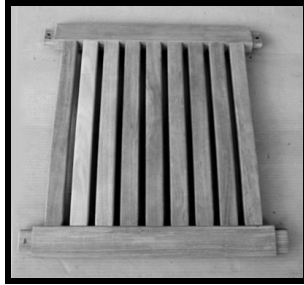


BACK



SEAT

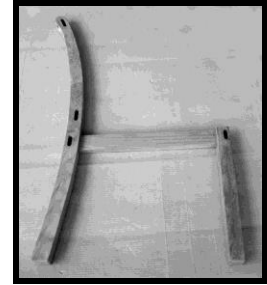

LEFT END FRAME

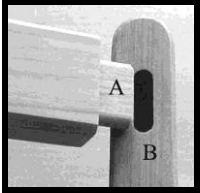

* NOTE:


A TENON

B MORTISE HOLE

STEP-I



Unpack, inspect and lay the parts on a clean, flat, soft surface to avoid marring the wood.

NOTE: During assembly of the furniture please match all joints with the corresponding letters or numbers stamped on the furniture.

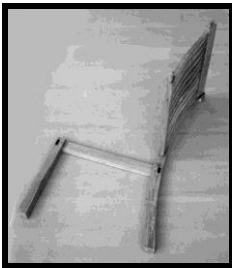

STEP-II

Fit the BACK and SEAT tenons into the END FRAME mortise holes using the stamped numbers or letters as guides. If necessary, gently rock the BACK and SEAT while pushing the tenons into the mortise holes until all joints fit snugly together.

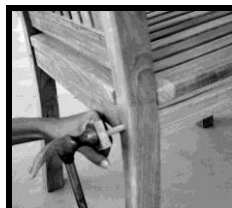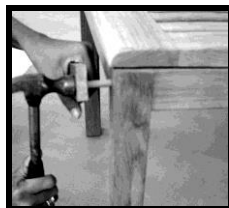

STEP-III

Fit the remaining END FRAME mortise holes over and onto all exposed tenons and using a rubber mallet gently tap the END FRAME evenly until all joints fit snugly together. Carefully hammer

dowels into the pre-drilled holes of the assembly, details are shown in the photographs. All dowels and dowel holes are properly marked with stickers. **NOTE: DO NOT FORCE THE DOWELS; ANY EXCESS CAN EASILY BE SANDED AWAY. IF THE DOWELS ARE NOT FLUSH DO NOT CONTINUE TO DRIVE THE DOWELS, YOU MIGHT DAMAGE THE ITEM.**

IF YOU HAVE ANY QUESTIONS REGARDING THE ASSEMBLY OF YOUR KINGSLEY-BATE FURNITURE, PLEASE CONTACT THE KINGSLEY-BATE DEALER NEAREST TO YOU OR KINGSLEY-BATE DIRECTLY. WE THANK YOU FOR CHOOSING OUR FURNITURE.

**KINGSLEY-BATE WILL NOT TAKE RESPONSIBILITY FOR DAMAGE IF THESE INSTRUCTIONS ARE NOT FOLLOWED PROPERLY.*