


# KINGSLEY-BATE

Fine Garden Furniture


## ASSEMBLY INSTRUCTIONS FOR THE CO-30/55/80




**BACK**

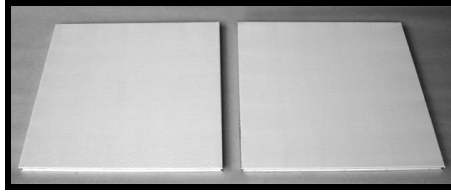


**SEAT INSERTS**

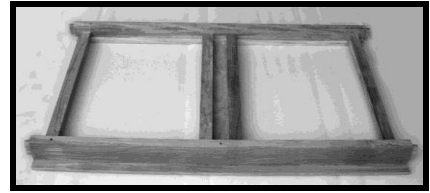


**SEAT**

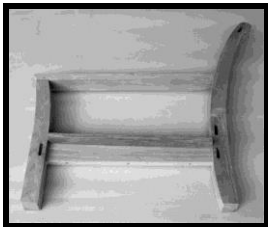

**END FRAME**

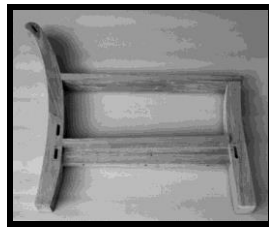

**END FRAME**

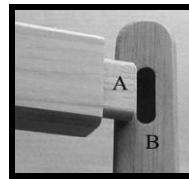

**\*NOTE**

**A TENON**

**B MORTISE HOLE**

### STEP-I

Unpack, inspect and lay the parts on a clean, flat, soft surface to avoid marring the wood.

**NOTE:** During assembly of the furniture please match all joints with the corresponding letters or numbers stamped on the furniture.



### STEP-II

Carefully lay down the END FRAME with the stamped numbers or letters on it and fit the SEAT & BACK tenons into the END FRAME mortise holes as shown in the assembly photograph. If necessary, gently rock the SEAT & BACK while pushing the tenons into place until the joints fit snugly together (use a rubber mallet to drive the joints together if necessary).



### STEP-III

Fit the remaining END FRAME mortise holes over and onto all exposed tenons. Using a rubber mallet or regular hammer with a wood block between the hammer and the wood, drive the tenons and mortise holes until all the joints fit snugly together.



#### **STEP-IV**

Hammer the dowels into their respective joints (dowel bags are marked according to where they go). Make sure not to hit other parts of the bench. To avoid dimpling the wood, we suggest you place a block of wood

between the dowel head and the hammer head for the last few blows. If dowels are not completely flush, use a saw to cut the ends and then sandpaper to smooth the top. \* After hammering, if dowels still protrude **DO NOT FORCE!**



#### **STEP-V**

Place INSERTS into SEAT as shown In photograph.

IF YOU HAVE ANY QUESTIONS REGARDING THE ASSEMBLY OF YOUR KINGSLEY-BATE FURNITURE, PLEASE CONTACT THE KINGSLEY-BATE DEALER NEAREST TO YOU OR KINGSLEY-BATE DIRECTLY. WE THANK YOU FOR CHOOSING OUR FURNITURE.

*\* KINGSLEY-BATE WILL NOT TAKE RESPONSIBILITY FOR DAMAGE  
IF THESE INSTRUCTIONS ARE NOT FOLLOWED PROPERLY*