


KINGSLEY~BATE

Fine Garden Furniture

ASSEMBLY INSTRUCTIONS FOR THE CO-30SR

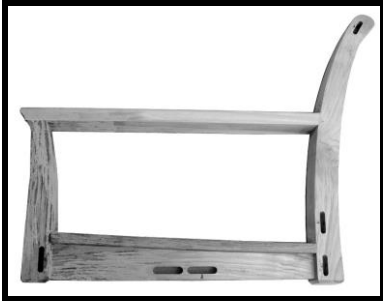

RIGHT END FRAME




BACK



LEFT END FRAME




SEAT FRAME

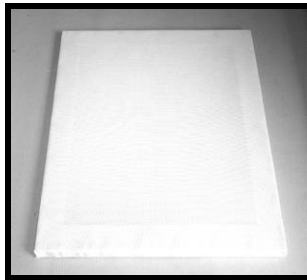

SEAT INSERT



BASE

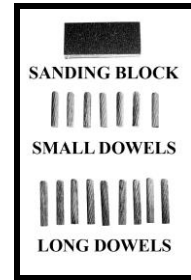

STEP-I


Unpack, inspect and lay the parts on a clean, flat, soft surface to avoid marring the wood.

NOTE: During assembly of the furniture please match joints with the corresponding letters or numbers stamped on the wood. Do not remove cardboard rolls from bottom of BASE until fully assembled.



STEP-II


Gently lay the END FRAME with the stamps near the mortise holes on a clean, flat surface and fit the BACK, and the SEAT FRAME tenons into the END FRAME mortise holes. If necessary, gently rock the parts while pushing down on them until all the joints fit snugly together.

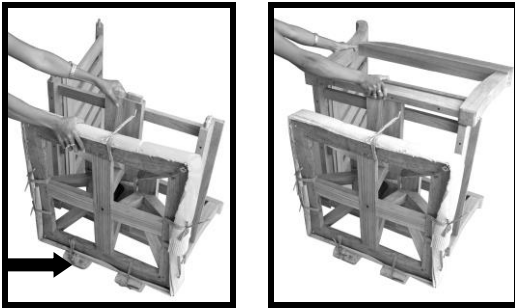

STEP-III

Carefully fit the BASE with the cardboard rolls into the SEAT FRAME as shown in the photograph. Place remaining END FRAME mortise holes over and onto all exposed tenons and using a rubber mallet or a regular hammer with the sanding block between the hammer and the wood, gently and evenly drive all the joints until

they fit snugly together.

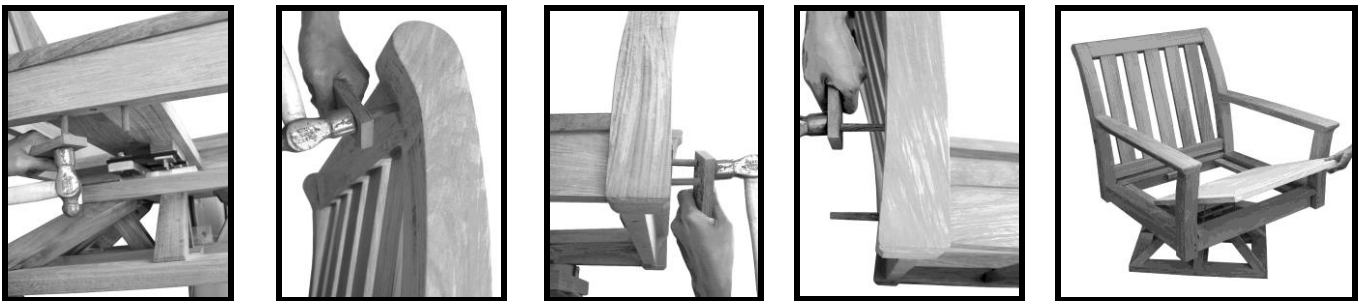

STEP-IV

Hammer dowels into respective joints making sure not to hit other parts of the bench. To avoid dimpling the wood, we suggest you place a block of wood between the dowel head and the hammer head for the last few blows. DO NOT FORCE DOWELS FURTHER THAN THEY WANT TO GO; any excess can be easily cut off with a saw and sanded smooth. Remove cardboard from base, upright chair and drop the SEAT INSERT into place.

IF YOU HAVE ANY QUESTIONS REGARDING THE ASSEMBLY OF YOUR KINGSLEY-BATE FURNITURE, PLEASE CONTACT THE KINGSLEY-BATE DEALER NEAREST TO YOU OR KINGSLEY-BATE DIRECTLY. WE THANK YOU FOR CHOOSING OUR FURNITURE.

** KINGSLEY-BATE WILL NOT TAKE RESPONSIBILITY FOR DAMAGE
IF THESE INSTRUCTIONS ARE NOT FOLLOWED PROPERLY*