KINGSLEY BATE™

ELEGANT OUTDOOR FURNITURE

ASSEMBLY INSTRUCTIONS FOR THE CO-32



RIGHT END FRAME






LEFT END FRAME





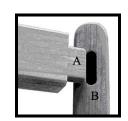

* NOTE A TENON **B MORTISE HOLE**

SEAT FRAME STEP-I

SEAT INSERT

Unpack, inspect and lay the parts on a clean, flat, soft surface to avoid marring the wood. **NOTE:** During assembly of the furniture please match joints with the corresponding letters





or numbers stamped on the wood.

STEP-II

Gently lay the END FRAME with the stamps near the mortise holes on a clean, flat surface and fit the BACK, and SEAT FRAME tenons into the END FRAME mortise holes. If necessary, gently rock the parts while pushing down on them until all the joints fit snugly together.



STEP-III

Carefully fit the remaining END FRAME mortise holes over all exposed tenons and using a rubber mallet or a regular hammer with the sanding block between the hammer and the wood, gently drive the mortise holes onto the tenons until all joints fit snugly together.

Carefully upright the chair by lifting it up and setting it down, tilting the chair over might damage un-doweled tenons.





STEP-IV

Carefully hammer the proper dowels into the pre-drilled holes of the assembly, details are shown in the photographs and all dowels (and/or dowel bags) are marked to match where they go. NOTE: DO NOT FORCE THE DOWELS; ANY EXCESS CAN

EASILY BE SANDED AWAY. IF THE DOWELS ARE NOT FLUSH DO NOT CONTINUE TO DRIVE THE DOWELS, YOU MIGHT DAMAGE THE ITEM.





STEP-V

Place SEAT INSERT into SEAT FRAME as shown in photograph.

IF YOU HAVE ANY QUESTIONS REGARDING THE ASSEMBLY OF YOUR KINGSLEY BATE FURNITURE, PLEASE CONTACT KINGSLEY BATE CUSTOMER SERVICE AT 703-361-7000. WE THANK YOU FOR CHOOSING OUR FURNITURE.

* KINGSLEY BATE WILL NOT TAKE RESPONSIBILITY FOR DAMAGE IF THESE INSTRUCTIONS ARE NOT FOLLOWED PROPERLY

> 7200 Gateway Court, Manassas, Virginia 20109 Phone: 703-361-7000, Fax: 703-361-7001