 

KINGSLEY BATE


Fine Garden Furniture ASSEMBLY INSTRUCTION FOR THE GV-10





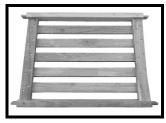

SEAT

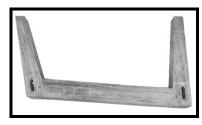

RIGHT END FRAME



* NOTE A TENON B MORTISE HOLE

STEP-I

Unpack, inspect and lay the parts on a clean, flat, soft surface to avoid marring the wood. NOTE: During assembly of the furniture please match joints with the corresponding letters or numbers stamped near the tenons and mortise holes.





STEP-II

Fit the LEFT and RIGHT END FRAMES onto the SEAT tenons as shown in the assembly photographs. If necessary use a rubber mallet or a hammer with the wood sanding block provided in between the hammer and item to drive the joints snugly together.



STEP-III

Insert all dowels as shown in photograph and use the wood sanding block provided for the last few blows to avoid marring the wood.

DO NOT FORCE DOWELS ANY PROTRUDING DOWEL CAN EASILY BE SANDED DOWN.

IF YOU HAVE ANY QUESTIONS REGARDING THE ASSEMBLY OF YOUR KINGSLEY BATE FURNITURE, PLEASE CONTACT KINGSLEY BATE CUSTOMER SERVICE AT 703-361-7000. WE THANK YOU FOR CHOOSING OUR FURNITURE.

* KINGSLEY BATE WILL NOT TAKE RESPONSIBILITY FOR DAMAGE IF THESE INSTRUCTIONS ARE NOT FOLLOWED PROPERLY*

> 7200 Gateway Court, Manassas, Virginia 20109 Phone: 703-361-7000, Fax: 703-361-7001