

KINGSLEY BATE

Fine Garden Furniture


ASSEMBLY INSTRUCTIONS FOR THE GV-30



BACK SLATS



SEAT

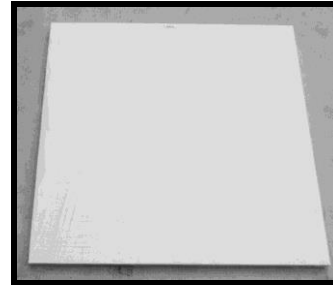


SEAT INSERT



RIGHT END FRAME



LEFT END FRAME

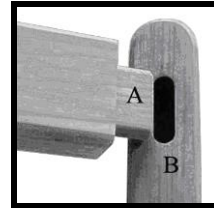

***NOTE:**


A TENON

B MORTISE HOLE

STEP-I

Unpack, inspect and lay the parts on a clean, flat, soft surface to avoid marring the wood.

NOTE: During assembly of the furniture please match joints with the corresponding letters or numbers stamped on the components.


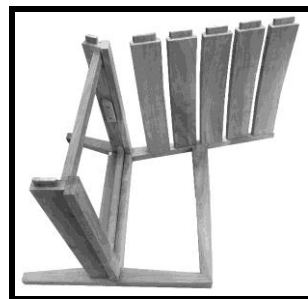


STEP-II

Gently lay down the END FRAME with the stamps near the mortise holes on a clean, flat, smooth surface. Fit the BACK SLATS and the SEAT FRAME into the END FRAME mortise hole as shown in the assembly pictures. You can gently rock the

components until all joints fit snugly together.

NOTE: The SEAT and BACK SLAT tenons will be stamped with letters or numbers to help guide you, please match them with the letters or numbers stamped on the END FRAME.

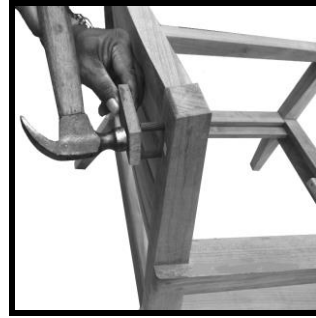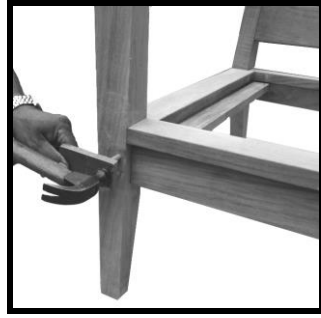

STEP-III

Fit the remaining END FRAME mortise holes over all exposed tenons and using a rubber mallet or a regular hammer with the sanding block between the hammer and the wood, gently drive all joints until they fit snugly together as shown in the assembly pictures. Insert all dowels as shown in the assembly pictures, small dowels “S” for the back and long dowels “L” for the front legs. Drop the SEAT INSERT into place.

NOTE: DO NOT FORCE THE DOWELS; ANY EXCESS CAN EASILY BE SANDED AWAY. IF THE DOWELS ARE NOT FLUSH DO NOT CONTINUE TO DRIVE THE DOWELS, YOU MIGHT DAMAGE THE ITEM.

IF YOU HAVE ANY QUESTIONS REGARDING ASSEMBLY OF YOUR KINGSLEY BATE FURNITURE, PLEASE CONTACT KINGSLEY BATE CUSTOMER SERVICE AT 703-361-7000. WE THANK YOU FOR CHOOSING OUR FURNITURE.

KINGSLEY BATE WILL NOT TAKE RESPONSIBILITY FOR DAMAGE IF THESE INSTRUCTIONS ARE NOT FOLLOWED PROPERLY

7200 Gateway Court, Manassas, Virginia 20109
Phone. 703-361-7000, Fax. 703-361-7001