


# KINGSLEY BATE

Fine Garden Furniture


## ASSEMBLY INSTRUCTIONS FOR THE GV-80




**BACK SLATS**

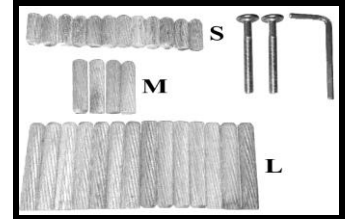


**HARDWARE**

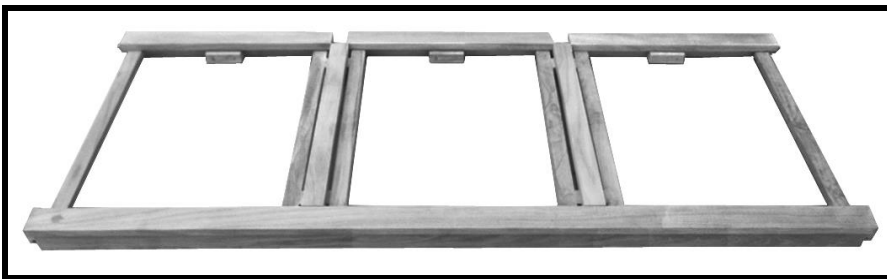

**SEAT FRAME**

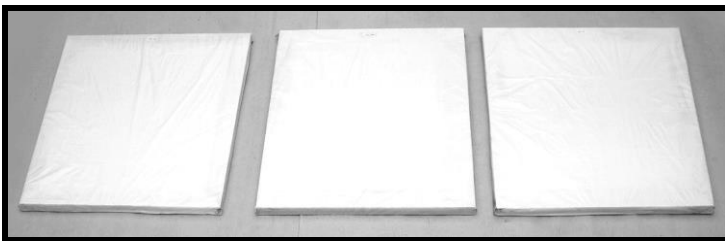

**SEAT INSERTS**

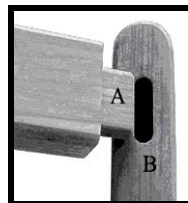

**\* NOTE**

**A TENON**

**B MORTISE HOLE**



**RIGHT END FRAME**



**MIDDLE LEGS**




**LEFT END FRAME**

### STEP-I

Unpack, inspect and lay the parts on a clean, flat, soft surface to avoid marring the wood.

**NOTE:** During assembly of the furniture please match joints with the corresponding letters or numbers stamped on the wood.

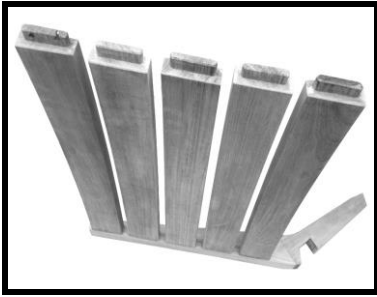

### STEP-II

Gently lay the MIDDLE LEG with the stamps near the mortise holes on a clean, flat surface and fit the BACK SLATS tenons into the MIDDLE LEG mortise holes. Fit the second MIDDLE LEG onto the


BACK SLATS tenons. If necessary, gently rock the parts while pushing down on them until all the joints fit snugly together. Carefully lay this assembly flat on the ground.



### STEP-III

Carefully fit the SEAT FRAME into the MIDDLE LEGS and secure the MIDDLE LEGS to the SEAT FRAME with the KD BOLT provided; gently tighten with Allen Key. Please do not forget to tighten the



MIDDLE LEG to the SEAT with Allen Key first before you fit the second and the third BACK (this will balance the assembly so it won't fall over).

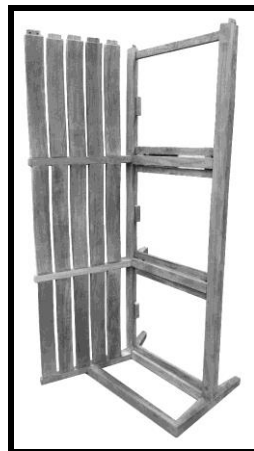

### STEP-IV

Gently lay the END FRAME with the stamps near the mortise holes on a clean, flat surface and fit the BACK SLATS tenons into the END FRAME mortise holes. Fit the MIDDLE LEGS SEAT FRAME assembly onto the BACK SLATS tenons and END FRAME mortise holes (a second person is required for this step). If necessary, gently rock the parts while pushing down on them until all the joints fit snugly together. Fit the remaining BACK SLATS into the second MIDDLE LEG mortise holes and gently push into place. Fit the remaining END FRAME mortise holes over all exposed tenons and using a rubber mallet or a regular hammer with the sanding block between the hammer and the wood, gently drive all the mortise holes onto the tenons until all joints fit snugly together.


\*\*\*TO UPRIGHT SOFA YOU WILL NEED TWO PEOPLE. LIFT COMPLETELY OFF THE GROUND, ROTATE TO HORIZONTAL POSITION AND SET DOWN. ATTEMPTING TO TIP SOFA OVER TO THE HORIZONTAL POSITION COULD DAMAGE THE ITEM.\*\*\*

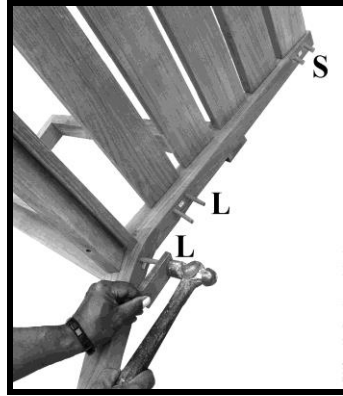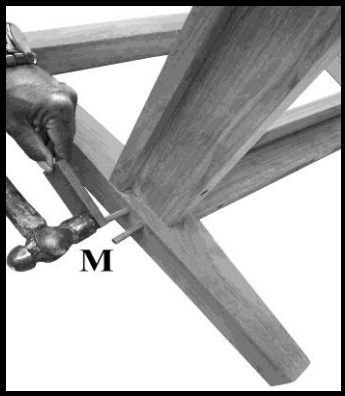

#### **STEP-V**

Carefully hammer the proper dowels into the pre-drilled holes of the assembly small dowels “S “ for the back , “M” for the front seat and long dowels “L” for the back seat and the slats near the seat , details are shown in photographs and all dowels (and/or dowel bags) are marked to match where they go. **NOTE: DO NOT FORCE THE DOWELS; ANY EXCESS**

**CAN EASILY BE SANDED AWAY. IF THE DOWELS ARE NOT FLUSH DO NOT CONTINUE TO DRIVE THE DOWELS, YOU MIGHT DAMAGE THE ITEM. YOU WILL NEED TWO PEOPLE TO UPRIGHT SOFA. LIFT AND SET DOWN, DO NOT TILT SOFA INTO UPRIGHT POSITION AS THIS COULD DAMAGE YOUR ITEM.**

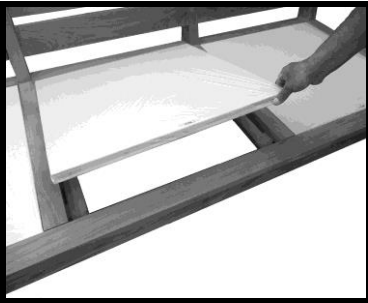

#### **STEP-VI**

Place the SEAT INSERT into SEAT FRAME as shown in photograph.

**IF YOU HAVE ANY QUESTIONS REGARDING THE ASSEMBLY OF YOUR KINGSLEY BATE FURNITURE, PLEASE CONTACT KINGSLEY BATE CUSTOMER SERVICE AT 703-361-7000. WE THANK YOU FOR CHOOSING OUR FURNITURE.**

*\* KINGSLEY BATE WILL NOT TAKE RESPONSIBILITY FOR DAMAGE IF THESE INSTRUCTIONS ARE NOT FOLLOWED PROPERLY\**