

KINGSLEY-BATE

Fine Garden Furniture
ASSEMBLY INSTRUCTIONS FOR THE IP–52

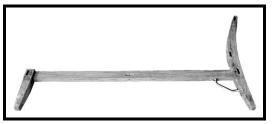

 
RIGHT END FRAME

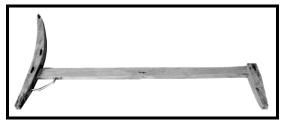

LEFT END FRAME







SEAT SCREEN

SEAT FRAME

BACK



* NOTE A TENON B MORTISE HOLE STEP-I

Unpack, inspect and lay the parts on a clean, flat, soft surface to avoid marring the wood. **NOTE:** During assembly of the furniture please match joints with the corresponding letters or numbers stamped on the wood.



STEP-II

Gently lay the END FRAME with the stamps near the mortise holes on a clean, flat surface and fit the SEAT FRAME, and BACK tenons into the END FRAME mortise holes as seen in the photograph. If necessary, gently rock the parts while pushing down on them until all the joints fit snugly together.



STEP-III

Carefully fit the remaining END FRAME mortise holes over all exposed tenons and using a rubber mallet or a regular hammer with the sanding block between the hammer and the wood, gently drive the mortise holes onto the tenons until all joints fit snugly together. Carefully upright the chair by lifting it up and setting it down, tilting the chair over might damage un-doweled tenons.










STEP-IV Carefully hammer the proper dowels into the pre-drilled holes of the assembly, details are shown in the

photographs and all dowels (and/or dowel bags) are marked to match where they go. NOTE: DO NOT FORCE THE DOWELS; ANY EXCESS CAN EASILY BE SANDED AWAY. IF THE DOWELS ARE NOT FLUSH DO NOT CONTINUE TO DRIVE THE DOWELS, YOU MIGHT DAMAGE THE ITEM.



STEP-V Place SEAT SCREEN into SEAT FRAME as shown in photograph.

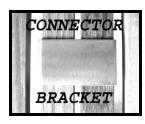

TO CONNECT UNITS OF SECTIONAL GROUP, THERE ARE 2 CLIPS SUPPLIED PER UNIT. PUSH THE UNITS TOGETHER AND INSERT THE CLIP OVER THE CORRESPONDING SIDE RAILS. WE RECOMMEND YOU USE 2 CLIPS PER SECTION, 1 CLIP LOCATED IN FRONT AND 1 CLIP LOCATED IN THE REAR.

IF YOU HAVE ANY QUESTIONS REGARDING THE ASSEMBLY OF YOUR KINGSLEY-BATE FURNITURE, PLEASE CONTACT THE KINGSLEY-BATE DEALER NEAREST TO YOU OR KINGSLEY-BATE DIRECTLY. WE THANK YOU FOR CHOOSING OUR FURNITURE.

* KINGSLEY-BATE WILL NOT TAKE RESPONSIBILITY FOR DAMAGE IF THESE INSTRUCTIONS ARE NOT FOLLOWED PROPERLY

> 7200 Gateway Court, Manassas, Virginia 20109 Phone: 703-361-7000, Fax: 703-361-7001