 
KINGSLEY-BATE

Fine Garden Furniture
ASSEMBLY INSTRUCTIONS FOR THE MC-47









LEG ASSEMBLY

TABLE TOP

LEG ASSEMBLY

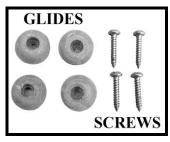

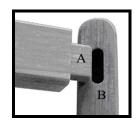

*NOTE
A TENON
B MORTISE HOLE
STEP-I

Unpack, inspect and lay the parts on a clean, flat, soft surface to avoid marring the wood.

NOTE: During assembly of the furniture please match all joints with the corresponding letters or numbers stamped on the furniture.



STEP-II

Carefully lay the TABLE TOP on a flat, smooth surface and fit the LEG ASSEMBLY mortise holes onto the TABLE TOP tenons as shown in the assembly photograph. Joints are meant to be tight, use of a rubber mallet may be necessary.



STEP-III

Carefully hammer the dowels into all the pre-drilled holes of the assembly as shown in the photo. Use the sanding block between the hammer and the dowels for the last few blows to prevent marring of the wood. DO NOT FORCE DOWELS; ANY PROTRUDING DOWEL CAN EASILY BE SANDED DOWN.







STEP-IV

OPTIONAL Rubber glides are provided for your items but are not necessary. Secure them to the bottom of the legs using a proper, hand held screw driver. Using a power driver might strip the head of the screw or damage the glide. Starter holes are visible as shown in the first photograph.

IF YOU HAVE ANY QUESTIONS REGARDING THE ASSEMBLY OF YOUR KINGSLEY-BATE FURNITURE, PLEASE CONTACT THE KINGSLEY-BATE DEALER NEAREST TO YOUR OR KINGSLEY-BATE DIRECTLY. WE THANK YOU FOR CHOOSING OUR FURNITURE.

* KINGSLEY-BATE WILL NOT TAKE RESPONSIBILITY FOR DAMAGE IF THESE INSTRUCTIONS ARE NOT FOLLOWED PROPERLY

> 7200 Gateway Court, Manassas, Virginia 20109 Phone: 703-361-7000, Fax: 703-361-7001