




KINGSLEY-BATE

Fine Garden Furniture

ASSEMBLY INSTRUCTIONS FOR THE MC-80

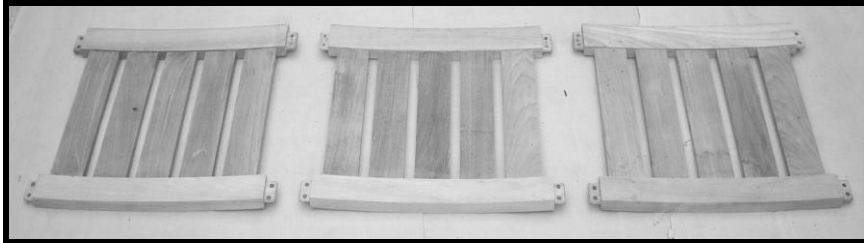


BACKS

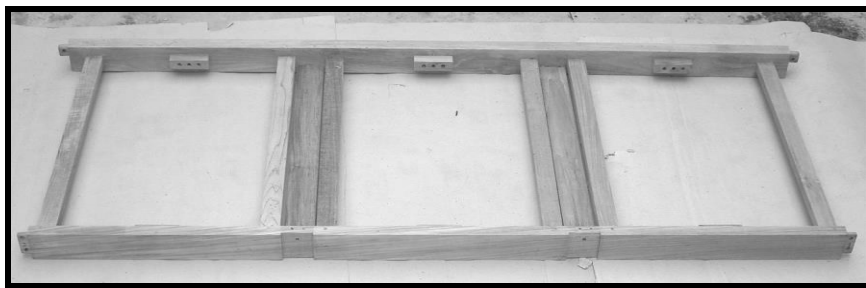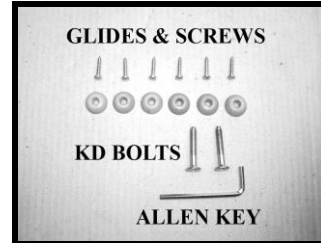


SEAT FRAME



MIDDLE LEGS

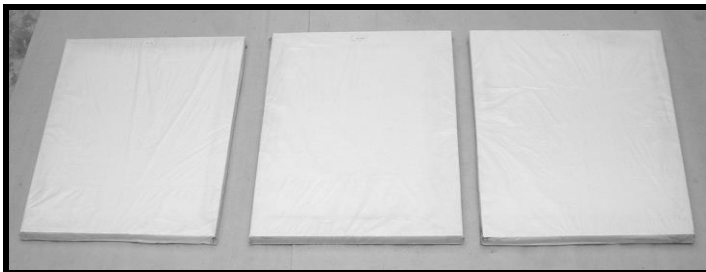

INSERTS

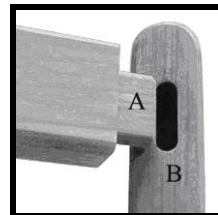

*** NOTE**
A TENON
B MORTISE HOLE



RIGHT END FRAME



LEFT END FRAME

STEP-I

Unpack, inspect and lay the parts on a clean, flat, soft surface to avoid marring the wood.

NOTE: During assembly of the furniture please match joints with the corresponding letters or numbers stamped on the wood.



STEP-II

Gently lay the END FRAME with the stamps near the mortise holes on a clean, flat surface and fit the first BACK tenons into the END FRAME mortise holes. Fit the first MIDDLE LEG into the first BACK. If necessary, gently rock the parts while pushing down on them until all the joints fit snugly together.



STEP-III

Carefully fit the SEAT into the END FRAME and secure the first MIDDLE LEG to the SEAT with the KD BOLT provided; gently tighten with Allen Key. Fit the second BACK tenons into the first MIDDLE LEG mortise holes and gently push into place. Fit the second MIDDLE LEG to the second BACK, secure the second MIDDLE LEG to the SEAT and tighten with Allen Key. Please do not forget to tighten the MIDDLE LEG to the SEAT with Allen Key first before you fit the second and the third BACK (this will balance the assembly so it won't fall over).



STEP-IV

Fit the third BACK into the second MIDDLE LEG mortise holes and gently push into place. Fit the remaining END FRAME mortise holes over all exposed tenons and using a rubber mallet or a regular hammer with the sanding block between the hammer and the wood, gently drive all the mortise holes onto the tenons until all joints fit snugly together.



STEP-V


Carefully hammer the proper dowels into the pre-drilled holes of the assembly, details are shown in photographs and

all dowels (and/or dowel bags) are marked to match where they go. **NOTE:** DO NOT FORCE THE DOWELS; ANY EXCESS CAN EASILY BE SANDED AWAY. IF THE DOWELS ARE NOT FLUSH DO NOT CONTINUE TO DRIVE THE DOWELS, YOU MIGHT DAMAGE THE ITEM. YOU WILL NEED TWO PEOPLE TO UPRIGHT SOFA. LIFT AND SET DOWN, DO NOT TILT SOFA INTO UPRIGHT POSITION AS THIS COULD DAMAGE YOUR ITEM.



STEP-VI

Place INSERT into SEAT FRAME as shown in photograph.

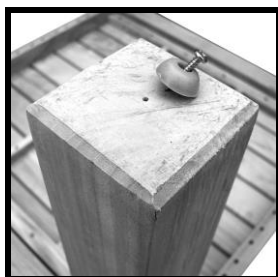

STEP-VII

*****OPTIONAL*****

Rubber glides are provided for your items but are not necessary. Secure them to the

bottom of the legs using a proper, hand held screw driver. Using a power driver might strip the head of the screw or damage the glide. Starter holes are visible as shown in the first photograph.

IF YOU HAVE ANY QUESTIONS REGARDING THE ASSEMBLY OF YOUR KINGSLEY-BATE FURNITURE, PLEASE CONTACT THE KINGSLEY-BATE DEALER NEAREST TO YOU OR KINGSLEY-BATE DIRECTLY. WE THANK YOU FOR CHOOSING OUR FURNITURE.

** KINGSLEY-BATE WILL NOT TAKE RESPONSIBILITY FOR DAMAGE
IF THESE INSTRUCTIONS ARE NOT FOLLOWED PROPERLY*