



KINGSLEY-BATE

Fine Garden Furniture



ASSEMBLY INSTRUCTIONS FOR THE NT-18

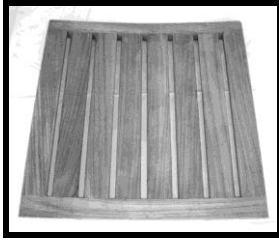


BACK

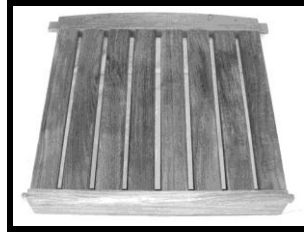

SEAT

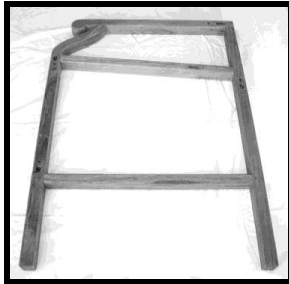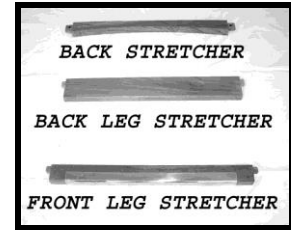

RIGHT END FRAME

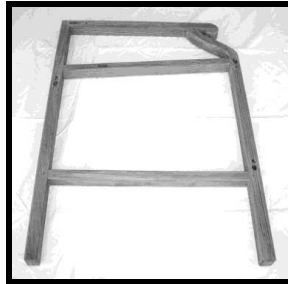


LEFT END FRAME

STEP-I

Unpack, inspect and lay the parts on a clean, flat, soft surface to avoid marring the wood.

NOTE: During assembly of the furniture please match joints with the corresponding letters or numbers.

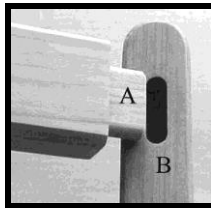

* NOTE:

A TENON

B MORTISE HOLE

STEP-II

Fit the **BACK STRETCHER**, **BACK LEG STRETCHER**, **FRONT LEG STRETCHER** and **SEAT** into the **RIGHT END FRAME** mortise holes.

If necessary, gently rock the **PARTS** while pushing the tenons into the mortise holes until all joints fit snugly together. Make sure that the numbered tenons correspond with the numbered mortise holes.



STEP-III

Carefully fit the remaining **LEFT END FRAME** mortise holes over all exposed tenons. If necessary you may use a rubber mallet or a regular hammer with the sanding block between the hammer and the wood, gently drive all the

mortise holes onto the tenons until joints fit snugly together. Holding the **END FRAMES** tight against the component parts, carefully **lift** the chair and place it upright on the ground. Slide **BACK FRAME** into position using the exposed dowels in the **SEAT** as a guide.



STEP-IV

Using a proper screw driver, insert and secure all knock down bolts as shown on the assembly photographs.



STEP-V

Carefully hammer dowels into LEFT and RIGHT END FRAMES. Use the sanding block between the hammer and dowels to prevent marring of the wood. BACK can be pushed slightly forward for better clearance when swinging hammer.

***NOTE: 1" DOWEL USED FOR PLUGGING END FRAMES.**



STEP-VI

Carefully drive the brass pins into the LEFT and RIGHT END FRAMES. Once flush with the wood, use the 1" plugs to cover the brass pins. Again, use the sanding block between the hammer and the wood to prevent any marring of the wood.

***NOTE: DO NOT FORCE THE DOWELS. ANY EXCESS CAN EASILY BE SANDED AWAY.**



STEP-VII

Secure screws into pre-drilled holes of the SEAT and the BACK as shown in assembly pictures, insert screws through BACK STRETCHER and into the BACK with a proper hand held screwdriver.

***NOTE : ½" DOWEL USED FOR COVERING SCREW HOLE IN BACK STRETCHER.**



STEP-VIII

Carefully hammer the plugs into the BACK STRETCHER to cover the screw holes. Again, if the plugs are not completely flush, just sand away the excess with the sanding block provided.

IF YOU HAVE ANY QUESTION REGARDING THE ASSEMBLY OF YOUR KINGSLEY-BATE FURNITURE, PLEASE CONTACT THE KINGSLEY-BATE DEALER NEAREST TO YOU OR KINGSLEY-BATE DIRECTLY. WE THANK YOU FOR CHOOSING OUR FURNITURE.

****KINGSLEY-BATE WILL NOT TAKE RESPONSIBILITY FOR DAMAGE IF THESE INSTRUCTIONS ARE NOT FOLLOWED PROPERLY.***