

KINGSLEY-BATE

Fine Garden Furniture

ASSEMBLY INSTRUCTIONS FOR THE NT-30




BACK




SEAT




BOTTOM STRETCHER

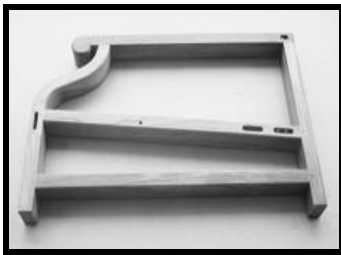

RIGHT END FRAME

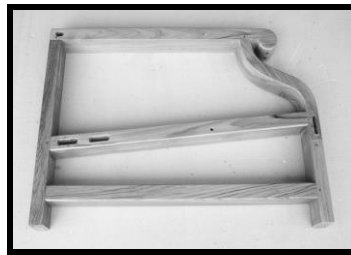

LEFT END FRAME

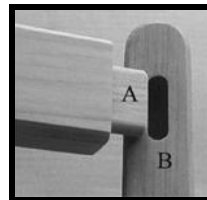

***NOTE:**

A TENON

B MORTISE HOLE

STEP-I


Unpack, inspect and lay the parts on a clean, flat, soft surface to avoid marring the wood.

NOTE: During assembly of the furniture please match joints with the corresponding letters or numbers.




STEP-II

Assemble the BACK and SEAT and secure with the knock down bolts provided. Please use a proper, hand held screw driver. Using a power screw driver may damage the bolt.

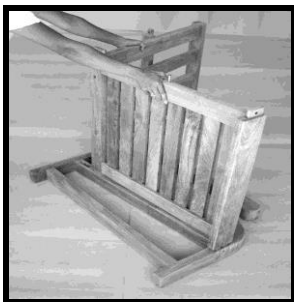


STEP-III

Place the SEAT/BACK assembly and BOTTOM STRETCHER into the RIGHT END FRAME mortise holes.

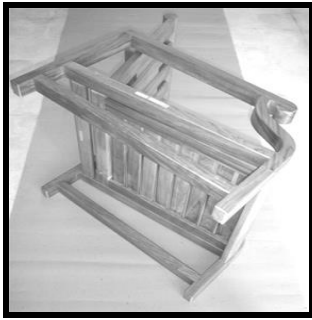

STEP-IV

Fit the LEFT END FRAME mortise holes over and onto the BOTTOM STRETCHER and SEAT/BACK assembly tenons. If necessary, use a rubber mallet to drive the joints snugly together.

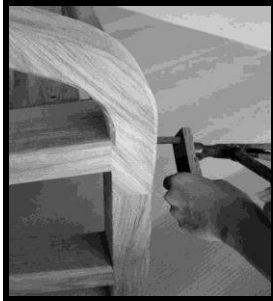

STEP-V

Insert all dowels as shown in the assembly photographs and drive them with a proper hammer. DO NOT FORCE DOWELS FURTHER THAN THEY WILL GO. ANY EXCESS CAN EASILY BE SANDED AWAY. TO PREVENT MARRING THE WOOD, PLEASE USE THE WOOD BLOCK BETWEEN THE DOWEL AND THE HAMMER HEAD FOR THE LAST FEW BLOWS.

IF YOU HAVE ANY QUESTION REGARDING THE ASSEMBLY OF YOUR KINGSLEY-BATE FURNITURE, PLEASE CONTACT A KINGSLEY-BATE DEALER NEAR YOU OR KINGSLEY-BATE DIRECTLY. WE THANK YOU FOR CHOOSING OUR FURNITURE.

**KINGSLEY-BATE WILL NOT TAKE RESPONSIBILITY FOR DAMAGE
IF THESE INSTRUCTIONS ARE NOT FOLLOWED PROPERLY.*

7200 Gateway Court, Manassas, Virginia 20109
Phone: 703-361-7000, Fax: 703-361-7001