
KINGSLEY~BATE

Fine Garden Furniture
ASSEMBLY INSTRUCTIONS FOR THE NT-70

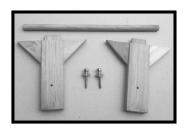







CHAISE FRAME

BACK LEG

FRONT LEG

HARDWARE

STEP-I

Unpack, inspect and lay the parts on a clean, flat, soft surface to avoid marring the wood. Lay CHAISE FRAME on its back side with mortise holes facing up as shown on the assembly diagram.




 


STEP-II

Before inserting the brass bolts through the back leg, slide one washer onto each bolt. Insert the bolts through the back leg and slide on the second washers. Then slide wheel onto the bolt and connect the wheel assembly with the short axle.




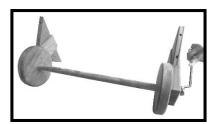




Screw in by hand and tighten with a standard adjustable wrench. Do not tighten too hard or the wheels will not turn. Complete the WHEEL ASSEMBLY as shown in the above photographs.



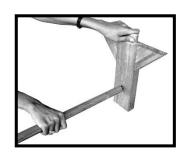

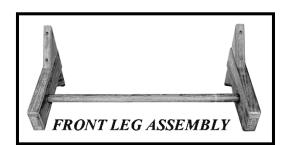

STEP-III

Before inserting the brass bolts to the front legs, slide one washer onto each bolt. Insert the bolts through the front legs and then connect with long axle. Screw in by hand also tighten with the standard adjustable wrench.







STEP-IV

With a rubber mallet gently knock the front and back leg assemblies into their corresponding place. Be sure to match the numbered tenons with the corresponding mortise holes.



STEP-V

If the wheels do not rotate after assembly, losen the bolts until you can achieve a smooth but secure movement.





STEP-VI

Insert screws into all leg braces to secure the legs to the chaise frame. Do not hammer in the screws, but drive them in with a proper hand held screw driver.



STEP-VII

With all legs tight against the side rails, insert the locking dowels and drive them in gently with a hammer. You should place the sanding block between the hammer and the dowel to prevent marring of the wood. If any dowels protrude, please do not force them in. Any excess can easily be sanded away.

IF YOU HAVE ANY QUESTIONS REGARDING THE ASSEMBLY OF YOUR KINGSLEY-BATE FURNITURE, PLEASE CONTACT THE KINGSLEY-BATE DEALER NEAREST TO YOU OR KINGSLEY-BATE DIRECTLY. WE THANK YOU FOR CHOOSING OUR FURNITURE.

*KINGSLEY-BATE WILL NOT TAKE RESPONSIBILITY FOR DAMAGE IF THESE INSTRUCTIONS ARE NOT FOLLOWED PROPERLY

> 7200 Gateway Court, Manassas, Virginia 20109 Phone: 703-361-7000, Fax: 703-361-7001