



KINGSLEY – BATE

Fine Garden Furniture

ASSEMBLY INSTRUCTIONS FOR THE NT-55/80

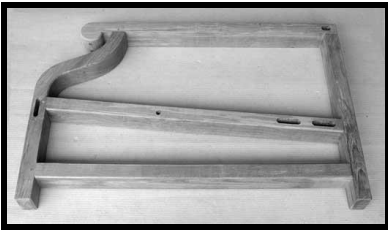

RIGHT END FRAME

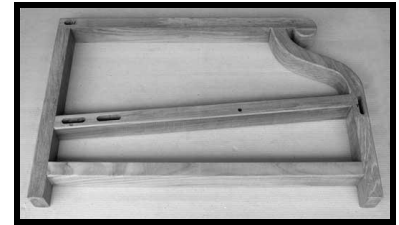

LEFT END FRAME



BACK




SEAT

STEP-I

Unpack, inspect and lay the parts on a clean, flat, soft surface to avoid marring the wood.

NOTE: During assembly of the furniture please match joints with the corresponding letters or numbers.

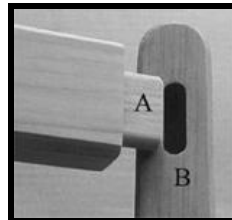

***NOTE:**

A TENON

B MORTISE HOLE

STEP-II

Assemble the BACK and SEAT and secure with the knock down bolts provided. Please use a proper, hand held screw driver. Using a power screw driver may damage the bolt.



STEP-III

Place the SEAT/BACK assembly and BOTTOM STRETCHER into the RIGHT END FRAME mortise holes.



STEP-IV

Fit the LEFT END FRAME mortise holes over and onto the BOTTOM STRETCHER and SEAT/BACK assembly tenons. If necessary, use a rubber mallet to drive the joints snugly together.



STEP-VI

Insert all dowels as shown on assembly diagram before lowering sofa or settee to its upright position.

DO NOT FORCE DOWELS FURTHER THAN THEY WILL GO. ANY EXCESS CAN EASILY BE SANDED AWAY. TO PREVENT MARRING THE WOOD, PLEASE USE THE WOOD BLOCK BETWEEN THE DOWEL AND THE HAMMER HEAD FOR THE LAST FEW BLOWS.

****NOTE****

- We recommend that two people upright the settee or sofa.
- Lowering the sofa or settee before doweling the item may cause damage to the END FRAMES.

IF YOU HAVE ANY QUESTION REGARDING ASSEMBLY OF YOUR KINGSLEY-BATE FURNITURE, PLEASE CONTACT THE KINGSLEY-BATE DEALER NEAREST TO YOU OR KINGSLEY-BATE DIRECTLY. WE THANK YOU FOR CHOOSING OUR FURNITURE.

**KINGSLEY-BATE WILL NOT TAKE RESPONSIBILITY FOR DAMAGE IF THESE INSTRUCTIONS ARE NOT FOLLOWED PROPERLY.*