
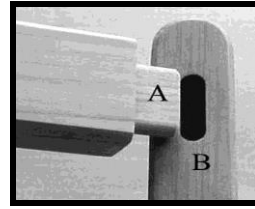
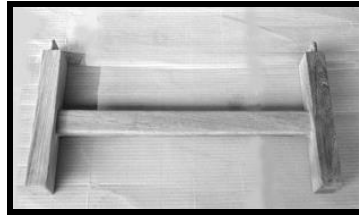


KINGSLEY-BATE

Fine Garden Furniture

ASSEMBLY INSTRUCTIONS FOR THE ST-70

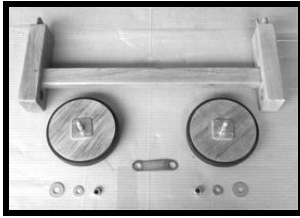

***NOTE**
A TENON
B MORTISE
HOLE

WHEEL ASSEMBLY FRONT LEG



STEP-I

Unpack, inspect and lay the parts on a clean, flat, soft surface to avoid marring the wood.

NOTE: During assembly of the furniture please match the joints with the corresponding letters or numbers stamped on the furniture.

CHAISE FRAME



STEP-II

With a rubber mallet, gently knock FRONT LEG and the WHEEL ASSEMBLY leg into their corresponding places. **Please be sure to match the numbered tenons with the corresponding mortise holes.**



STEP-III

Insert the locking dowels and drive them in gently. **If you use a hammer be sure to place the sanding block provided between the hammer and the leg for the last few blows.**

This will prevent marring of the wood. Do not force dowels. If dowels are not completely flush just sand away any excess with the sanding block.



STEP-IV

Insert the bolts through the wheels and slide the bigger washers onto each bolt. Now, insert the bolts through the WHEEL ASSEMBLY legs and slide the second smaller washers onto the bolts. Tighten the nut with the tool provided. Do not tighten too hard, or the wheels will not turn.

IF YOU HAVE ANY QUESTIONS REGARDING THE ASSEMBLY OF YOUR KINGSLEY-BATE FURNITURE, PLEASE CONTACT THE KINGSLEY-BATE DEALER NEAREST TO YOU OR KINGSLEY-BATE DIRECTLY. WE THANK YOU FOR CHOOSING OUR FURNITURE.

**KINGSLEY-BATE WILL NOT TAKE RESPONSIBILITY FOR DAMAGE
IF THESE INSTRUCTIONS ARE NOT FOLLOWED PROPERLY.*