

KINGSLEY – BATE

Fine Garden Furniture

Sling Replacement Instructions*

- Step 1 Slowly loosen the track by turning the bolts evenly until loose (this will avoid too much pressure on the other bolts).
- Step 2 Loosen the bolts on the opposite side of track as well but do not remove (this is to loosen the fabric tension so replacing the opposite side will be easier).
- Step 3 Slide the fabric gently off the track and insert the new sling **
- Step 4 With the fabric in place, carefully hand tighten the bolts along the entire track.
- Step 5 Evenly tighten all bolts back down until fabric is fully stretched back into place

** If a new track is being used, then swab a small amount of petroleum jelly to the end of the track and begin sliding the fabric into the track. Be careful not to snag the fabric on the track.

**** KINGSLEY-BATE WILL NOT TAKE RESPONSIBILITY FOR DAMAGE
IF THESE INSTRUCTIONS ARE NOT FOLLOWED PROPERLY***

7200 Gateway Court, Manassas, Virginia 20109
Phone: 703-361-7000, Fax: 703-361-7001