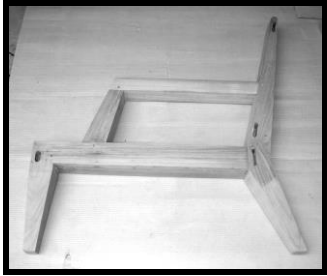# KINGSLEY–BATE
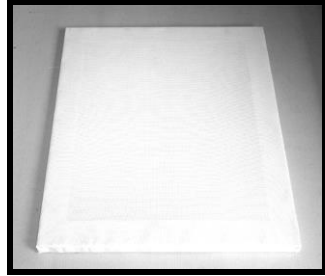Fine Garden Furniture
ASSEMBLY INSTRUCTIONS FOR THE MC-30

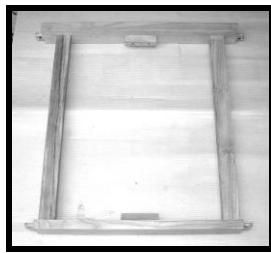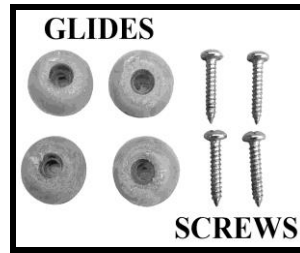**RIGHT END FRAME**

SEAT INSERT

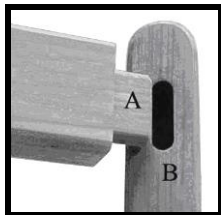**LEFT END FRAME**

BACK

SEAT FRAME

GLIDES
SCREWS

STEP-I
Unpack, inspect and lay the parts on a clean, flat, soft surface to avoid marring the wood.
NOTE: During assembly of the furniture please match joints with the corresponding letters or numbers stamped on the wood.

A
B

* NOTE
A TENON
B MORTISE HOLE
STEP-II
Gently lay the END FRAME with the stamps near the mortise holes on a clean, flat surface and fit the BACK and SEAT FRAME tenons into the END FRAME mortise holes. If necessary, gently rock the parts while pushing down on them until all the joints fit snugly together.

STEP-III
Carefully fit the remaining END FRAME mortise holes over all exposed tenons and using a rubber mallet or a regular hammer with the sanding block between the hammer and the wood, gently drive all the mortise holes onto the tenons until all joints fit snugly together.
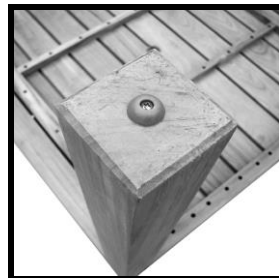
STEP-IV
Carefully hammer the proper dowels into the pre-drilled holes of the assembly, details are shown in photographs and all dowels (and/or dowel bags) are marked to match where they go. **NOTE:** DO NOT FORCE THE DOWELS; ANY EXCESS CAN EASILY BE SANDED AWAY. IF THE DOWELS ARE NOT FLUSH DO NOT CONTINUE TO DRIVE THE DOWELS, YOU MIGHT DAMAGE THE ITEM.

STEP-V
Place SEAT INSERT into SEAT FRAME as shown in photograph.

STEP-VI
OPTIONAL
Rubber glides are provided for your items but are not necessary. Secure them to the bottom of the legs using a proper, hand held screw driver. Using a power driver might strip the head of the screw or damage the glide. Starter holes are visible as shown in the first photograph.

IF YOU HAVE ANY QUESTIONS REGARDING THE ASSEMBLY OF YOUR KINGSLEY-BATE FURNITURE, PLEASE CONTACT THE KINGSLEY-BATE DEALER NEAREST TO YOU OR KINGSLEY-BATE DIRECTLY. WE THANK YOU FOR CHOOSING OUR FURNITURE.

* KINGSLEY-BATE WILL NOT TAKE RESPONSIBILITY FOR DAMAGE
IF THESE INSTRUCTIONS ARE NOT FOLLOWED PROPERLY