

Stone Age Concrete Games, Inc.

Installation instructions - Cantilevered Table Tennis Table

Unload all items using proper equipment.


Required for offloading: Forklift or other lifting device such as backhoe or tractor with forks. Please follow manufacturers lift and distance weight ratings.

Tools:

- 1 1/8" socket
- Hex drivers
- Hand Truck (dolly)
- 4' level
- Electric screwdriver for shipping pallet
- Phillips bits for packaging
- Two 12' lifting straps
- Lifting hook or shackle

Safety: All components are heavy and require care in placement until installation is complete. Use equipment and straps rated for lifting and inspected before use. Keep body parts clear of pinch points during placement. Runner to leg connections must be tightened before top halves are placed.


Quality Note: Steel runner and net components must be **TOUCHING** concrete/threaded inserts to avoid stress fractures to concrete when tightening bolts. Use washers as shims if needed. Do not over tighten 3/8" net and table bolts.

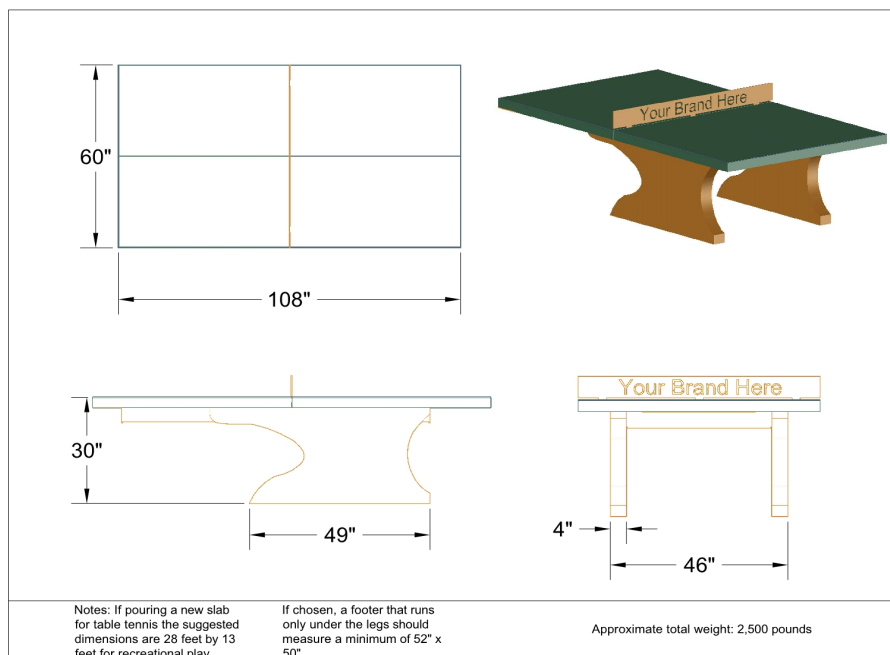

Bravado Outdoor Products

Cantilever Table

Installation Instructions

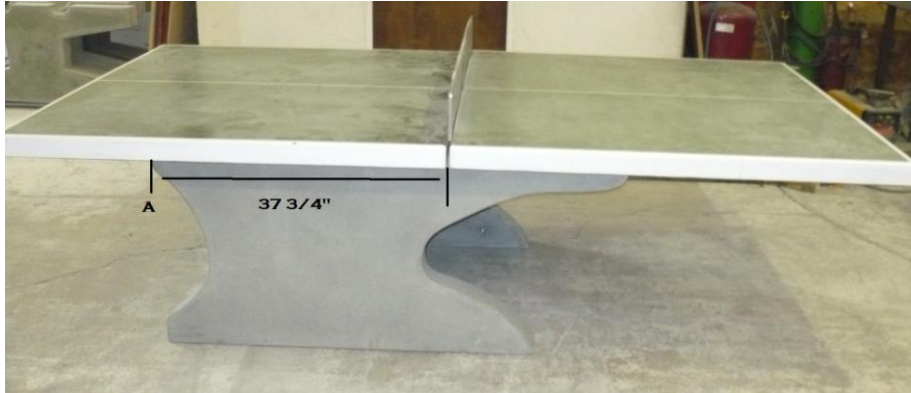

1. Bolt legs to the powder coated steel frame using $\frac{3}{4}$ " bolts and lock washers. Level frame by shimming under legs if needed.
2. Install floor L brackets using roto-hammer and supplied $\frac{1}{2}$ " anchor bolts.
3. Install the first top half over the legs (not on the cantilever side).
The center line (net edge) of the table should line up $37 \frac{3}{4}$ " from the edge of the frame (A) in photo above.
It is extremely important if the table is ever taken down and moved after installation to remove the cantilever top FIRST.
4. Line up and install $\frac{3}{8}$ " bolts with washers through the frame into the first table top. Leave bolts loose until both tops are aligned and all bolts are started.
5. Install net using provided flathead bolts.
6. Install second top on the cantilever side of the table.
7. Align and snug all frame table top bolts.

Installation notes: Lift tops with packaging in place using two 12' lifting straps positioned over the foam corner packaging. Use a locking hook or shackle for safety.



Top weight is 800lbs. Use rated lifting equipment.