


KINGSLEY-BATE

Fine Garden Furniture


ASSEMBLY INSTRUCTIONS FOR THE AM-05

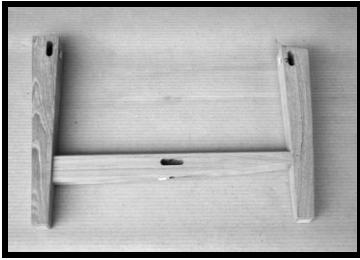

LEG




SEAT

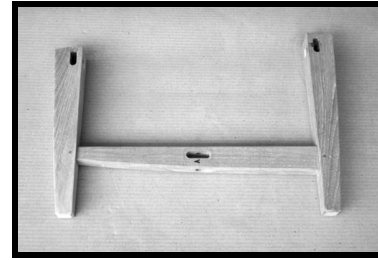

LEG



BOTTOM LEG STRETCHER

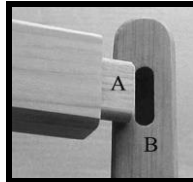

***NOTE**

A TENON

B MORTISE HOLE

STEP-I

Unpack, inspect and lay the parts on a clean, flat, soft surface to avoid marring the wood.

NOTE: During assembly of the furniture please match all joints with the corresponding letters or numbers stamped on the furniture.



STEP-II

Find the LEG with numbers or letters on it and lay it down first. Fit the SEAT & BOTTOM LEG STRETCHER tenons into the LEG mortise holes as shown in the photos. If necessary, gently rock the parts while pushing the tenons into the mortise holes until joints fit snugly together. You

may also use a rubber mallet or a hammer with a block of wood between the hammer and the wood to carefully drive joints together.



STEP-III

Using a hammer, drive the dowels into place with direct, sharp blows; be careful not to mar the wood. Any protruding dowels can easily be sanded away. **DO NOT FORCE DOWELS FURTHER THAN THEY WANT TO**

GO.

IF YOU HAVE ANY QUESTIONS REGARDING THE ASSEMBLY OF YOUR KINGSLEY-BATE FURNITURE, PLEASE CONTACT THE KINGSLEY-BATE DEALER NEAREST TO YOUR OR KINGSLEY-BATE DIRECTLY. WE THANK YOU FOR CHOOSING OUR FURNITURE.

** KINGSLEY-BATE WILL NOT TAKE RESPONSIBILITY FOR DAMAGE IF THESE INSTRUCTIONS ARE NOT FOLLOWED PROPERLY*