


# KINGSLEY – BATE

Fine Garden Furniture


## ASSEMBLY INSTRUCTIONS FOR THE AM - 20

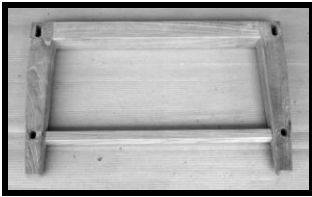

**END FRAME**




**TABLE TOP**

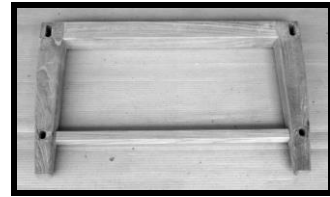

**END FRAME**



**BOTTOM LEG STRETCHER**

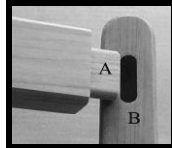

### **\*NOTE**

A TENON

B MORTISE HOLE

### **STEP-I**

Unpack, inspect and lay the parts on a clean, flat, soft surface to avoid marring the wood.

**NOTE:** During assembly of the furniture please match all the joints with the corresponding letter or numbers stamped on the furniture.



### **STEP-II**

Carefully lay the END FRAME with the stamped numbers on a flat surface. Making sure that you line up the stamped tenons of the TABLE TOP and the BOTTOM LEG STRETCHERS with those on the END FRAME, gently insert the tenons as shown in

the above diagram. If necessary, gently rock the parts while pushing the tenons into the mortise holes until all the joints fit snugly together. You may also use a rubber mallet or a hammer with a block of wood between the hammer and the wood to drive the joints together.



### **STEP-III**

Using a hammer, drive the dowels into place with direct sharp blows. We suggest that you place a block of wood between the hammer head and the dowel head for the last few blows. This will prevent marring the wood. **DO NOT FORCE DOWELS FURTHER THAN THEY WANT TO GO.** Any

protruding dowels can easily be sanded away.

**IF YOU HAVE ANY QUESTIONS REGARDING THE ASSEMBLY OF YOUR KINGSLEY-BATE FURNITURE, PLEASE CONTACT THE KINGSLEY-BATE DEALER NEAREST TO YOU OR KINGSLEY-BATE DIRECTLY. WE THANK YOU FOR CHOOSING OUR FURNITURE.**

*\* KINGSLEY-BATE WILL NOT TAKE RESPONSIBILITY FOR DAMAGE  
IF THESE INSTRUCTIONS ARE NOT FOLLOWED PROPERLY*

7200 Gateway Court, Manassas, Virginia 20109  
Phone: 703-361-7000, Fax: 703-361-7001