

KINGSLEY-BATE

Fine Garden Furniture


ASSEMBLY INSTRUCTIONS FOR THE AM-50




LEGS



TABLE TOP

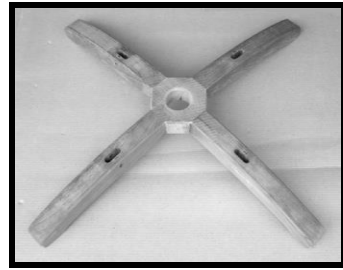

BASE

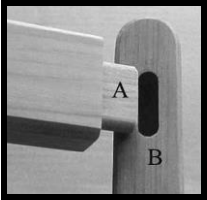

* NOTE

A TENON

B MORTISE HOLE

STEP-I

Unpack, inspect and lay the parts on a clean, flat, soft surface to avoid marring the wood.

NOTE: During assembly of the furniture please match all the joints with the corresponding letters or numbers stamped on the furniture.



STEP-II

Carefully lay the TABLE TOP face down on a flat, smooth surface. Insert all four LEGS into the top matching the numbers or letters stamped on the tenons. If necessary, gently rock the parts while pushing the tenons into the mortise holes until joints fit snugly together.



STEP-III

Line up the BASE mortise holes with the matching tenons of the LEGS. Using a rubber mallet or a hammer with a block of wood between the hammer head and the wood, drive the tenons and the mortise holes together until all joints fit snugly together. **DRIVE BASE EVENLY TO AVOID DAMAGING THE FACTORY JOINTS.**



STEP-IV

Drive the dowels through the tenons of the LEGS where they meet the BASE and the TABLE TOP. Drive the dowels by using direct sharp blows with a hammer. Do not force the dowels further than they can go and be careful not to mar the wood. Any protruding dowels can easily be sanded away.

IF YOU HAVE ANY QUESTIONS REGARDING THE ASSEMBLY OF YOUR KINGSLEY-BATE FURNITURE, PLEASE CONTACT THE KINGSLEY-BATE DEALER NEAREST TO YOU OR KINGSLEY-BATE DIRECTLY. WE THANK YOU FOR CHOOSING OUR FURNITURE.

** KINGSLEY-BATE WILL NOT TAKE RESPONSIBILITY FOR DAMAGE IF THESE INSTRUCTIONS ARE NOT FOLLOWED PROPERLY*