
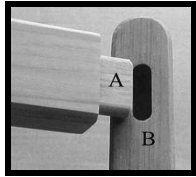


KINGSLEY – BATE

Fine Garden Furniture

ASSEMBLY INSTRUCTIONS FOR THE AM - 70

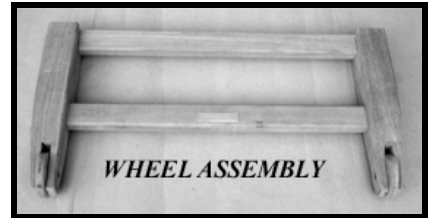

*NOTE

A TENON

B MORTISE HOLE

STEP-I

Unpack, inspect and lay the parts on a clean, flat, soft surface to avoid marring the wood.

NOTE: During assembly of the furniture please match all joints with the corresponding letters or numbers stamped on the furniture.



STEP-II

Matching the numbers stamped on the LEG ASSEMBLIES, carefully slide all the assemblies into position as shown in the photographs.



STEP-III

With a rubber mallet gently knock the legs into place. If you use a hammer put the sanding block between the leg and the hammer to prevent marring the wood.



STEP-IV

Once the legs are tight against the rails, drive the dowels into place with a hammer, use the sanding block between the hammer and dowels for the last few blows to prevent marring the wood. If dowels protrude above the wood, sand level with the sanding block. **DO NOT FORCE THE DOWELS.** Make sure to sand along the grain of the wood.

IF YOU HAVE ANY QUESTIONS REGARDING THE ASSEMBLY OF YOUR KINGSLEY-BATE FURNITURE, PLEASE CONTACT THE KINGSLEY-BATE DEALER NEAREST TO YOU OR KINGSLEY-BATE DIRECTLY. WE THANK YOU FOR CHOOSING OUR FURNITURE.

** KINGSLEY-BATE WILL NOT TAKE RESPONSIBILITY FOR DAMAGE
IF THESE INSTRUCTIONS ARE NOT FOLLOWED PROPERLY*