

KINGSLEY – BATE

Fine Garden Furniture


ASSEMBLY INSTRUCTIONS FOR THE AM - 30/55/80



BACK




SEAT

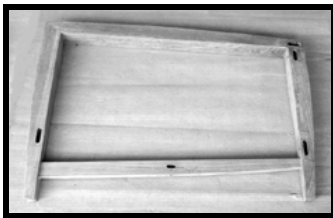

END FRAME



END FRAME

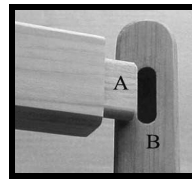

***NOTE**

A TENON

B MORTISE HOLE

STEP-I


Unpack, inspect and lay the parts on a clean, flat, soft surface to avoid marring the wood.

NOTE: During assembly of the furniture please match all joints with the corresponding letters or numbers stamped on the furniture.



STEP-II

Assemble the SEAT to the BACK with the 6mm brass knock down bolts. Screw in by hand and tighten with a proper screw driver.

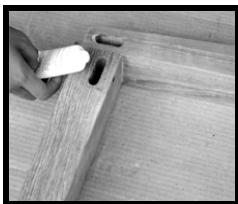

STEP-III

Place both END FRAMES flat with the mortise holes facing up. With the glue stick apply a thin film of glue to the walls of the mortise holes. If any excess glue squeezes out from the joints, wipe off with a slightly damp rag.



STEP-IV

Fit the assembled seat and back to one END FRAME. Match the numbered tenons with the corresponding numbered mortise holes. Place the BOTTOM LEG STRETCHER into the END FRAME mortise hole. If necessary, gently rock the BOTTOM LEG STRETCHER until the joint fits snugly together.



STEP-V

Fit the second END FRAME into place. Using a rubber mallet or a hammer with the sanding block between the hammer and the wood, drive the tenons and mortise holes together until all joints fit snugly.



STEP-VI

After hammering the END FRAMES tight against the rails, insert the 8mm locking dowels with a hammer in the pre drilled positions before lowering the sofa or settee to its upright position. * **IMPORTANT**

Lowering the sofa or settee before doweling the item may cause damage to the END FRAMES. Use the sanding block between the hammer and the dowels for the last few blows to prevent

marring the

wood.



STEP-VII

Insert the 6mm locking dowels into the BOTTOM LEG STRETCHER and END FRAMES. Again, use the sanding block between the hammer and the dowels for the last few blows to prevent marring the wood. If the dowels protrude above the wood, sand level with the sanding block. Make sure to sand along the grain of the wood. ***DO NOT FORCE**

DOWELS*

IF YOU HAVE ANY QUESTIONS REGARDING THE ASSEMBLY OF YOUR KINGSLEY-BATE FURNITURE, PLEASE CONTACT THE KINGSLEY-BATE DEALER NEAREST TO YOU OR KINGSLEY-BATE DIRECTLY. WE THANK YOU FOR CHOOSING OUR FURNITURE.

** KINGSLEY-BATE WILL NOT TAKE RESPONSIBILITY FOR DAMAGE
IF THESE INSTRUCTIONS ARE NOT FOLLOWED PROPERLY*