KINGSLEY-BATE

Fine Garden Furniture ASSEMBLY INSTRUCTIONS FOR THE CL-18A




SEAT



BACK






* NOTE: A TENON B MORTISE HOLE



RIGHT END FRAME STEP-I



LEFT END FRAME





STEP-II

Fit the BACK, BOTTOM LEG STRETCHER and FRONT SEAT RAIL tenons into the end frame mortise holes. If necessary, gently rock the parts while pushing tenons into place until joints fit snugly together.



STEP-III

Fit the remaining END FRAME mortise holes onto all exposed tenons as shown in photographs and carefully upright chair by lifting it and setting it down while holding the END FRAMES in place securely.










STEP-IV

Place SEAT into the chair frame as shown in the pictures below and secure knock-down bolts using a proper screw driver; be careful not to over tighten bolts.

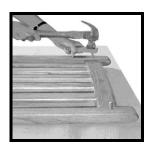



STEP-V

Carefully hammer dowels into respective joints, making sure not to hit other parts of the chair. To avoid dimpling the wood we suggest you place a block of wood between dowel head and hammer head on the last few blows. If dowels are not completely flush, use a saw to cut the ends and then

sandpaper to smooth the tops. *After hammering, if dowels still protrude do not continue hammering! Insert brass screws into respective pre-drilled SEAT holes (see picture). Do not hammer in the screws, but drive them in with a proper screw driver.

Note: For easier doweling you may want to place the BACK of the chair on a protected table top as shown in the assembly picture.

IF YOU HAVE ANY QUESTIONS REGARDING THE ASSEMBLY OF YOUR KINGSLEY-BATE FURNITURE, PLEASE CONTACT THE KINGSLEY-BATE DEALER NEAREST TO YOU OR KINGSLEY-BATE DIRECTLY. WE THANK YOU FOR CHOOSING OUR FURNITURE.

* KINGSLEY-BATE WILL NOT TAKE RESPONSIBILITY FOR DAMAGE IF THESE INSTRUCTIONS ARE NOT FOLLOWED PROPERLY.

> 7200 Gateway Court, Manassas, Virginia 20109 Phone: 703-361-7000, Fax: 703-361-7001