
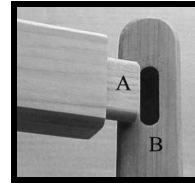
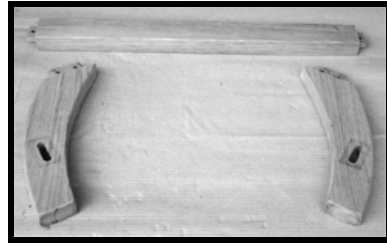


KINGSLEY – BATE

Fine Garden Furniture

ASSEMBLY INSTRUCTIONS FOR THE CL - 70

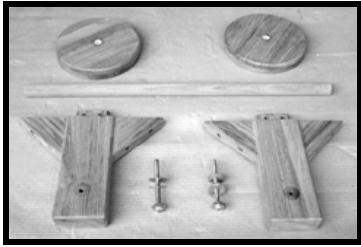

***NOTE**
A TENON
B MORTISE HOLE

FRONT LEG

BACK LEG



STEP-I

Unpack, inspect and lay the parts on a clean, flat, soft surface to avoid marring the wood. Lay the CHAISE FRAME on its back side with mortise holes facing up as shown in the assembly photograph.

NOTE: During assembly of the furniture please match all joints with the corresponding letters or numbers stamped on the furniture.

CHAISE FRAME



STEP-II


Assemble the FRONT LEGS making sure to match the numbered tenons to the corresponding mortise holes. With a rubber mallet gently knock the front legs into place as shown in the pictures.

If you use a hammer be sure to place the sanding block between the hammer and the leg. This will prevent marring the wood.





STEP-III

After hammering the legs tight against the stretcher bar, insert the locking dowels and drive them in gently. **Again, if you use a hammer, please place the sanding block between the dowel and the hammer to prevent any marring of the wood. Do not force the dowels. If dowels are not completely flush just sand away any excess with the sanding block.**

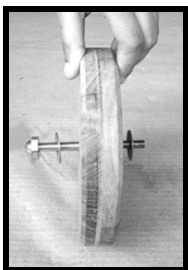

STEP-IV

Before inserting the brass bolts through the wheels, slide one washer onto each bolt. Insert the bolts through the wheels and slide on the second washers and then connect the wheel assemblies to the back legs (see pictures).

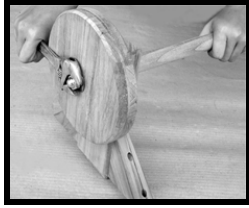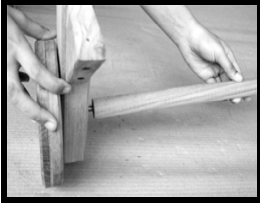

STEP-V

Connect the axle to the wheel and back leg assemblies. Screw in by hand and finish with a 3/4" or standard adjustable wrench. Do not tighten too hard, or the wheels will not turn.



STEP-VI

With a rubber mallet, gently knock the front and back leg assemblies into their corresponding places. **Be sure to match the numbered tenons with the corresponding mortise holes.**



STEP-VII

Insert brass screws into the back leg braces to secure the legs to the chaise frame. Do not hammer in the screws, but drive them in with a proper screw driver. With the legs tight against the side rails, insert the locking dowels and drive them in gently with a hammer. You should place the sanding block between the hammer and the dowel to prevent marring of the wood. **If any dowels protrude, please do not force them in. Any excess can easily be sanded away.**



STEP-VIII

With front legs tight against the side rails, insert the locking dowels and drive them in gently with a hammer. **Again being careful not to mar the wood.** **If any dowels protrude, please do not force them in. Any excess can easily be sanded away.** Make sure to sand along the grain of the wood to prevent scratch marks.

IF YOU HAVE ANY QUESTIONS REGARDING THE ASSEMBLY OF YOUR KINGSLEY-BATE FURNITURE, PLEASE CONTACT THE KINGSLEY-BATE DEALER NEAREST TO YOU OR KINGSLEY-BATE DIRECTLY. WE THANK YOU FOR CHOOSING OUR FURNITURE.

** KINGSLEY-BATE WILL NOT TAKE RESPONSIBILITY FOR DAMAGE
IF THESE INSTRUCTIONS ARE NOT FOLLOWED PROPERLY*