

KINGSLEY~BATE

Fine Garden Furniture

ASSEMBLY INSTRUCTIONS FOR THE CO-18



RIGHT END FRAME




BACK




SEAT



LEFT END FRAME

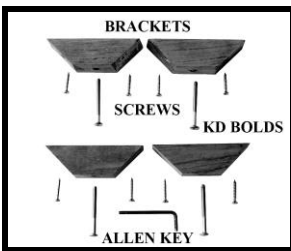

BOTTOM STRETCHER

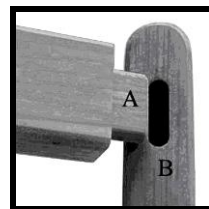

*** NOTE:**

A TENON

B MORTISE HOLE

STEP-I

Unpack, inspect and lay the parts on a

clean, flat, soft surface to avoid marring the wood.

NOTE: During assembly of the furniture please match all joints with the corresponding letters or numbers stamped on the furniture.



STEP-II


Fit the **BACK**, **SEAT** and **BOTTOM STRETCHER** tenons into the **END FRAME** mortise holes using the stamped numbers or letters as guides. If necessary, gently rock the **BACK**, **SEAT** and **BOTTOM STRETCHER** while pushing the tenons into the mortise holes until all joints fit snugly together.



STEP-III

Fit the remaining **END FRAME** mortise holes over and onto all exposed tenons and using a rubber mallet gently tap the **END FRAME** evenly until all joints fit snugly together. Carefully hammer

dowels into the pre-drilled holes of the assembly as shown in the photographs. All dowels and dowel holes are properly marked with stickers. **NOTE: DO NOT FORCE THE DOWELS; ANY EXCESS CAN EASILY BE SANDED AWAY. IF THE DOWELS ARE NOT FLUSH DO NOT CONTINUE TO DRIVE THE DOWELS, YOU MIGHT DAMAGE THE ITEM.**

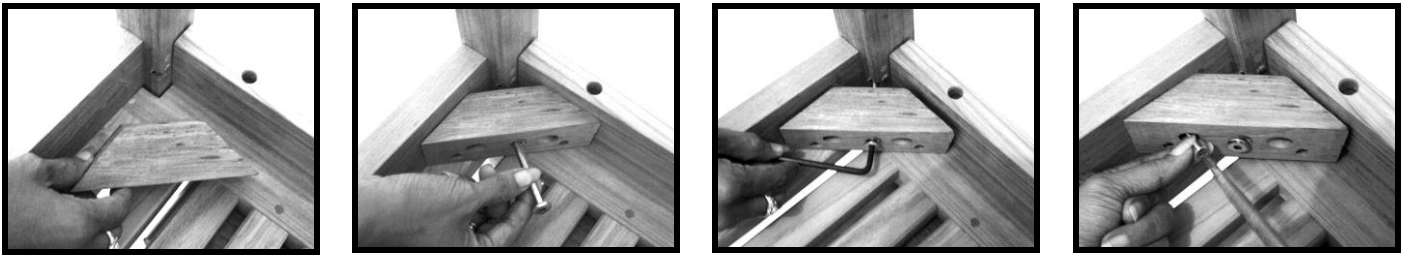

STEP-IV

Place the assembled chair upside down on top of a table so chair sits level as seen in the above photographs. Place the small brackets into place and insert the KD bolt in the center first using the Allen key provided. Insert the screws using a proper screw driver. We strongly suggest you do not use a power screwdriver; the torque could easily drive the screws too far into the bracket and damage the END FRAME.

**IF YOU HAVE ANY QUESTIONS REGARDING THE ASSEMBLY OF YOUR
KINGSLEY-BATE FURNITURE, PLEASE CONTACT THE KINGSLEY-BATE DEALER
NEAREST TO YOU OR KINGSLEY-BATE DIRECTLY. WE THANK YOU FOR
CHOOSING OUR FURNITURE.**

**KINGSLEY-BATE WILL NOT TAKE RESPONSIBILITY FOR DAMAGE
IF THESE INSTRUCTIONS ARE NOT FOLLOWED PROPERLY.*