


# KINGSLEY BATE™

ELEGANT OUTDOOR FURNITURE

## ASSEMBLY INSTRUCTIONS FOR THE CO-31



**LEG ASSEMBLY**

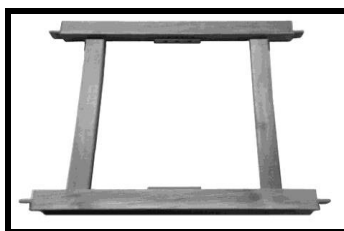


**SEAT**



**LEG ASSEMBLY**



**SEAT INSERT**

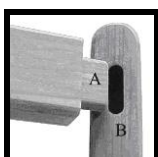

**\*NOTE**  
**A TENON**  
**B MORTISE HOLE**

### **STEP-I**

Unpack, inspect and lay the parts on a clean, flat, soft surface to avoid marring the wood.

**NOTE:** During assembly of the furniture please match all joints with the corresponding letters or numbers stamped on the furniture.



### **STEP-II**

Find the LEG ASSEMBLY with the numbers or letters stamped on it and lay it down first. Fit the SEAT tenons into the LEG ASSEMBLY mortise holes as shown in the photograph.



### **STEP-III**

Carefully fit the remaining LEG ASSEMBLY mortise holes over all the exposed tenons. Hammer the dowels into all the pre-drilled holes of the assembly as shown in the photographs. Use the sanding block between the hammer and the dowels for the last few blows to prevent marring of the wood. **DO NOT FORCE DOWELS; ANY PROTRUDING DOWEL CAN EASILY BE SANDED DOWN.**

IF YOU HAVE ANY QUESTIONS REGARDING THE ASSEMBLY OF YOUR KINGSLEY BATE FURNITURE, PLEASE CONTACT KINGSLEY BATE CUSTOMER SERVICE AT 703-361-7000. WE THANK YOU FOR CHOOSING OUR FURNITURE.

*\* KINGSLEY BATE WILL NOT TAKE RESPONSIBILITY FOR DAMAGE  
IF THESE INSTRUCTIONS ARE NOT FOLLOWED PROPERLY*