


KINGSLEY-BATE

Fine Garden Furniture

ASSEMBLY INSTRUCTIONS FOR THE GV-52/60

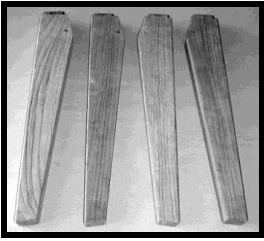

LEGS



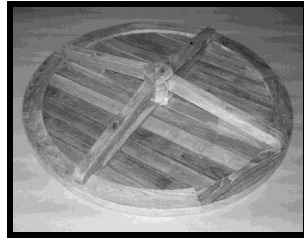


TABLE TOP

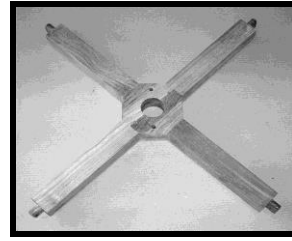

CROSS BRACE

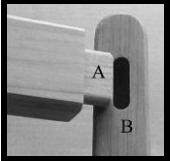

*** NOTE**


A TENON

B MORTISE HOLE

STEP-I

Unpack, inspect and lay the parts on a clean, flat, soft surface to avoid marring the wood.

NOTE: During assembly of the furniture please match all the joints with the corresponding letters or numbers stamped on the furniture.

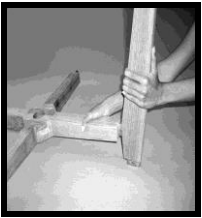

STEP-II

Fit the CROSS BRACE tenons into the LEG mortise holes using the stamped numbers or letters as guides.



STEP-III

Fit the LEG ASSEMBLY into the TABLE TOP using the stamped numbers or letters as guides. Using a rubber mallet or a hammer with a block of wood between the hammer and the wood, drive the tenons and the mortise holes evenly until all joints fit snugly together. Insert the two knock down bolts as shown in assembly pictures. Secure them with a proper screw driver (using a power screw driver could lead to damage).



STEP-IV

Drive the dowels (as seen in photographs) by using direct sharp blows with a hammer (again, please use the sanding block between the dowels and the hammer for the last few blows). Do not force the dowels further than they can go and be careful not to mar the wood. Any protruding dowels can easily be sanded away.

IF YOU HAVE ANY QUESTIONS REGARDING THE ASSEMBLY OF YOUR KINGSLEY-BATE FURNITURE, PLEASE CONTACT THE KINGSLEY-BATE DEALER NEAREST TO YOU OR KINGSLEY-BATE DIRECTLY. WE THANK YOU FOR CHOOSING OUR FURNITURE.

** KINGSLEY-BATE WILL NOT TAKE RESPONSIBILITY FOR DAMAGE IF THESE INSTRUCTIONS ARE NOT FOLLOWED PROPERLY*