

# KINGSLEY-BATE

Fine Garden Furniture

## ASSEMBLY INSTRUCTIONS FOR THE IP-20




**LEG ASSEMBLY**



**TOP**



**LEG ASSEMBLY**

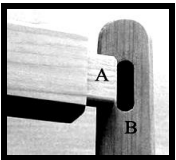

**NOTE:**

**A TENON**

**B MORTISE HOLE**

**STEP-I**

Unpack, inspect and lay the parts on a clean, flat, soft surface to avoid marring the wood.

NOTE: During assembly of the furniture please match all joints with the corresponding letters or numbers stamped on the furniture.



**STEP-II**

Lay TABLE TOP on a clean, flat surface and fit the LEG ASSEMBLY mortise holes to the TABLE TOP tenons as seen in the photograph. If necessary, gently rock the LEG ASSEMBLY while pushing tenons into mortise holes until joints fit snugly together. Make sure to match the numbered tenons with the corresponding mortise holes.



**STEP-III**

Secure the LEG ASSEMBLIES to the TABLE TOP with the knock down bolts provided; all bolts can now be tightened by using the allen key provided. Carefully upright table.

IF YOU HAVE ANY QUESTIONS REGARDING THE ASSEMBLY OF YOUR KINGSLEY-BATE FURNITURE, PLEASE CONTACT THE KINGSLEY-BATE DEALER NEAREST TO YOU OR KINGSLEY-BATE DIRECTLY. WE THANK YOU FOR CHOOSING OUR FURNITURE.

*\*KINGSLEY-BATE WILL NOT TAKE RESPONSIBILITY FOR DAMAGE IF THESE INSTRUCTIONS ARE NOT FOLLOWED PROPERLY.*