


KINGSLEY-BATE

Fine Garden Furniture


ASSEMBLY INSTRUCTIONS FOR THE MC-10





LEG ASSEMBLY

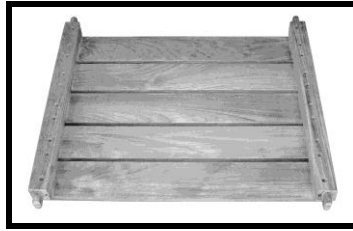

SEAT

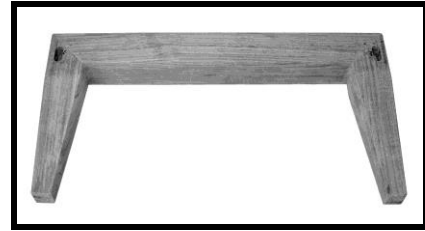

LEG ASSEMBLY

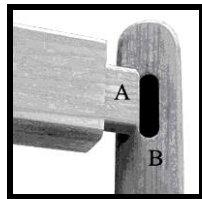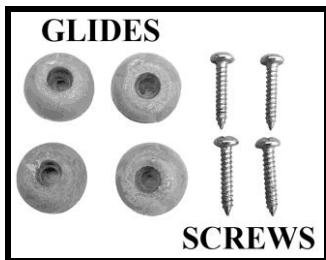

***NOTE**

A TENON

B MORTISE HOLE

STEP-I

Unpack, inspect and lay the parts on a clean, flat, soft surface to avoid marring the wood.

NOTE: During assembly of the furniture please match all joints with the corresponding letters or numbers stamped on the furniture.



STEP-II



Carefully lay the SEAT on a flat, smooth surface and fit the LEG ASSEMBLIES mortise holes onto the SEAT tenons as shown in the assembly photograph. Joints are meant to fit snugly together, if necessary use a rubber mallet or a hammer with the sanding block provided between the hammer head and the LEG ASSEMBLIES to

drive the LEG ASSEMBLIES into position.



STEP-III

Hammer the dowels into all the pre-drilled holes of the assembly as shown in the photograph. Use the sanding block between the hammer and the dowels for the last few blows to prevent marring of the wood. DO NOT FORCE DOWELS ANY PROTRUDING DOWEL CAN EASILY BE SANDED DOWN.

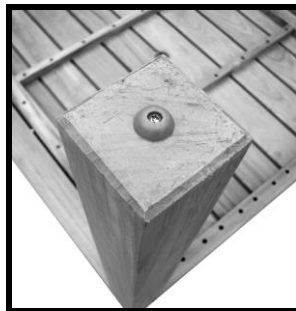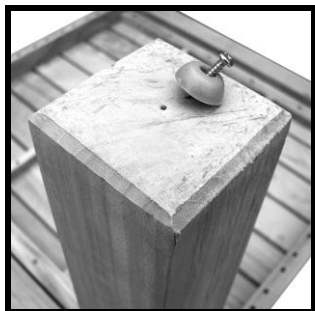

STEP-IV

*****OPTIONAL***** Rubber glides are provided for your items but are not necessary. Secure them to the bottom of the legs using a proper, hand held screw driver. Using a power driver might strip the head of the screw or damage the glide. Starter holes are visible as shown in the first photograph.

**IF YOU HAVE ANY QUESTIONS REGARDING THE ASSEMBLY OF YOUR
KINGSLEY-BATE FURNITURE, PLEASE CONTACT THE KINGSLEY-BATE DEALER
NEAREST TO YOU OR KINGSLEY-BATE DIRECTLY. WE THANK YOU FOR
CHOOSING OUR FURNITURE.**

**** KINGSLEY-BATE WILL NOT TAKE RESPONSIBILITY FOR DAMAGE
IF THESE INSTRUCTIONS ARE NOT FOLLOWED PROPERLY***