

# KINGSLEY-BATE

Fine Garden Furniture


## ASSEMBLY INSTRUCTIONS FOR THE MC-22




**LEG ASSEMBLY**



**TOP**

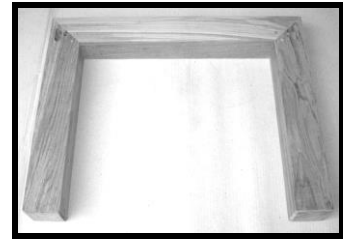

**LEG ASSEMBLY**

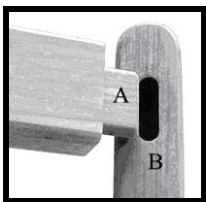

### **NOTE:**

**A TENON**

**B MORTISE HOLE**

### **STEP-I**

Unpack, inspect and lay the parts on a clean, flat, soft surface to avoid marring the wood.

NOTE: During assembly of the furniture please match all joints with the corresponding letters or numbers stamped on the furniture.



### **STEP-II**

Fit the TABLE TOP tenons to the LEG ASSEMBLY mortise holes. If necessary, gently rock the LEG ASSEMBLY while pushing tenons into mortise holes until joints fit snugly. Make sure to match the numbered tenons with the corresponding mortise holes.



### **STEP-III**

Carefully hammer the dowels into the pre-drilled holes of the assembly, details are shown in the photograph. Use the sanding block between the dowel head and the hammer for the last few blows to avoid marring the wood. **NOTE: DO NOT FORCE THE DOWELS; ANY EXCESS CAN EASILY BE SANDED AWAY. IF THE DOWELS ARE NOT FLUSH DO NOT CONTINUE TO DRIVE THE DOWELS, YOU MIGHT DAMAGE THE ITEM.**

IF YOU HAVE ANY QUESTIONS REGARDING THE ASSEMBLY OF YOUR KINGSLEY-BATE FURNITURE, PLEASE CONTACT THE KINGSLEY-BATE DEALER NEAREST TO YOU OR KINGSLEY-BATE DIRECTLY. WE THANK YOU FOR CHOOSING OUR FURNITURE.

*\*KINGSLEY-BATE WILL NOT TAKE RESPONSIBILITY FOR DAMAGE  
IF THESE INSTRUCTIONS ARE NOT FOLLOWED PROPERLY.*