

KINGSLEY – BATE

Fine Garden Furniture

ASSEMBLY INSTRUCTIONS FOR THE NT 15/25



BACK




SEAT



RIGHT END FRAME



LEFT END FRAME

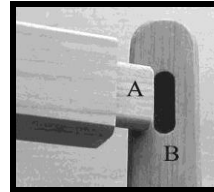

*** NOTE**

A TENON

B MORTISE HOLE

STEP-I


Unpack, inspect and lay the parts on a clean, flat, soft surface to avoid marring the wood.

NOTE: During assembly of furniture please match joints with the corresponding letter or numbers.



STEP-II

Fit the BACK LEG STRETCHER, BACK STRETCHER, and SEAT into the RIGHT END FRAME mortise holes. If necessary, gently rock the BACK LEG STRETCHER while pushing the tenon into the mortise hole until the joint fits snugly together. Make sure that the numbered tenons correspond with the numbered mortise holes.

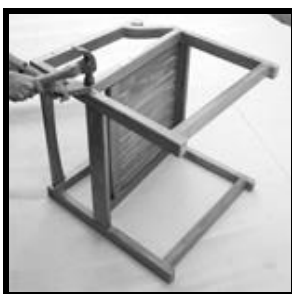

STEP-III

Carefully fit the remaining LEFT END FRAME mortise holes over all exposed tenons. Using a rubber mallet or a regular

hammer with the sanding block between the hammer and the wood, gently drive all the mortise holes onto the tenons until all joints fit snugly together. Slide BACK FRAME into position using the exposed dowels in the SEAT FRAME as a guide.



STEP-IV

Using a proper screw driver, insert and secure all knock down bolts as shown on the assembly diagram.



STEP-V

Carefully hammer dowels into LEFT and RIGHT END FRAMES. Use the sanding block between the hammer and the dowels to prevent marring of the wood.

NOTE : 1" DOWEL USED FOR PLUGGING END FRAMES



STEP-VI

Carefully drive the brass pins into the LEFT and RIGHT END FRAMES. Once flush with the wood, use the 1" plugs to cover the brass pins. Again, use the sanding block between the hammer and the wood to prevent any marring of the wood.



**NOTE: DO NOT FORCE THE DOWELS.
ANY EXCESS CAN EASILY BE
SANDED AWAY.**

STEP-VII

Insert screws into pre-drilled holes of the SEAT FRAME and the BACK STRETCHER as shown on the assembly diagram. Do not hammer in the screws, drive them in with a proper screw driver.



STEP-VIII

Carefully hammer the plugs into the BACK STRETCHER to cover the screw holes. Again, if the plugs are not completely flush, just sand away the excess with the sanding block provided.

**NOTE: 1/2" DOWEL USED FOR COVERING SCREW
HOLE IN BACK STRETCHER.**

**IF YOU HAVE ANY QUESTION REGARDING ASSEMBLY OF YOUR
KINGSLEY-BATE FURNITURE, PLEASE CONTACT A KINGSLEY-BATE DEALER
NEAREST TO YOU OR KINGSLEY-BATE DIRECTLY. WE THANK YOU FOR
CHOOSING OUR FURNITURE.**

**KINGSLEY-BATE WILL NOT TAKE RESPONSIBILITY FOR DAMAGE
IF THESE INSTRUCTIONS ARE NOT FOLLOWED PROPERLY.*