

# KINGSLEY – BATE

Fine Garden Furniture

## ASSEMBLY INSTRUCTIONS FOR THE NT 22/40



TABLE TOP



LEG FRAMES




CENTER STRETCHER

### STEP-I

Unpack, inspect and lay the parts on a clean, flat, soft surface to avoid marring the wood.


NOTE: During assembly of furniture please match joints with the corresponding letters or numbers.

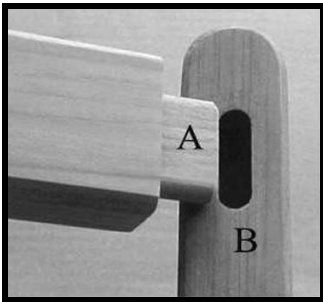

\* NOTE

A TENON

B MORTISE HOLE

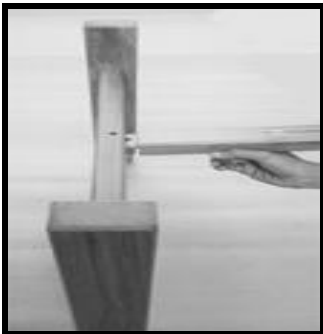

### STEP-II

Making sure to match the numbered tenons and mortise holes, fit the CENTER STRETCHER into the corresponding LEG FRAMES as shown in the assembly photographs.



### **STEP-III**

Carefully insert the completed LEG ASSEMBLY tenons into the TABLE TOP mortise holes. Again making sure to match the numbered tenons and mortise holes. If necessary, gently rock the LEG ASSEMBLY while pushing the tenons into the mortise holes until all joints fit snugly.



### **STEP-IV**

Carefully hammer dowels into the TABLE TOP and the CENTER STRETCHER. To avoid marring the wood, we suggest that you use a block of wood between the hammer and the dowels for the last few blows.

IF YOU HAVE ANY QUESTIONS REGARDING THE ASSEMBLY OF YOUR KINGSLEY-BATE FURNITURE, PLEASE CONTACT THE KINGSLEY-BATE DEALER NEAREST TO YOU OR KINGSLEY-BATE DIRECTLY. WE THANK YOU FOR CHOOSING OUR TEAK GARDEN FURNITURE.

*\* KINGSLEY-BATE WILL NOT TAKE RESPONSIBILITY FOR DAMAGE  
IF THESE INSTRUCTIONS ARE NOT FOLLOWED PROPERLY.*