


KINGSLEY – BATE

Fine Garden Furniture

ASSEMBLY INSTRUCTIONS FOR THE NT - 55/80

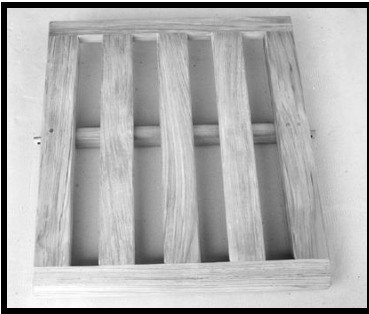

BACK FRAME




SEAT FRAME



BOTTOM STRETCHER



RIGHT END FRAME


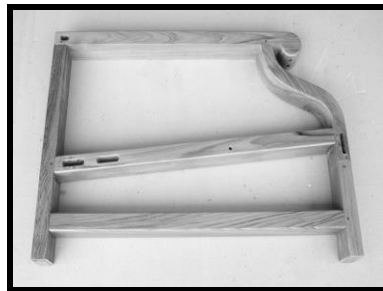


LEFT END FRAME

STEP-I

Unpack, inspect and lay the parts on a clean, flat, soft surface to avoid marring the wood.

NOTE: During assembly of furniture please match joints with the corresponding letter or numbers.

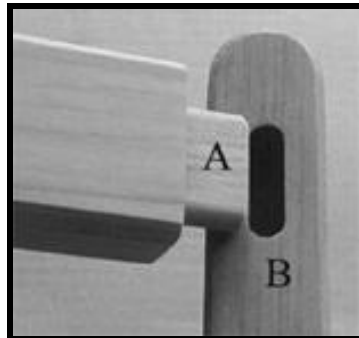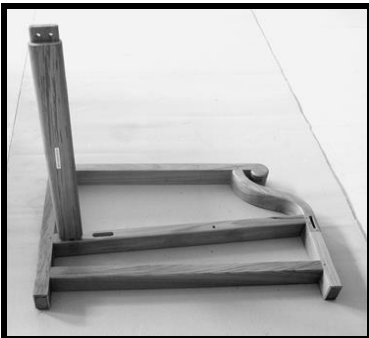

STEP-II

Fit the **BOTTOM STRETCHER** into the **LEFT END FRAME** mortise.

*NOTE:

A TENON

B MORTISE HOLE



STEP-III

Place **SEAT SECTION** into **LEFT END FRAME** mortise.



STEP-IV

Place **BACK SECTION** into **LEFT END FRAME** mortise as shown on the assembly diagram and secure **BACK SECTION** to **SEAT SECTION** with the knock down bolts provided.



STEP-V

Fit the **RIGHT END FRAME** mortises to the **BOTTOM STRETCHER**, **SEAT SECTION**, and **BACK SECTION**. If necessary, gently rock the back frame while pushing tenons into mortises until joints fit snugly.



STEP-VI

Insert all dowels as shown on assembly diagram before lowering sofa or settee to its upright.

Lowering the sofa or settee before doweling the item may cause damage to the END FRAMES.

IF YOU HAVE ANY QUESTION REGARDING ASSEMBLY OF YOUR KINGSLEY-BATE FURNITURE, PLEASE CONTACT A KINGSLEY-BATE DEALER NEAREST TO YOU OR KINGSLEY-BATE DIRECTLY. WE THANK YOU FOR CHOOSING OUR FURNITURE.

**KINGSLEY-BATE WILL NOT TAKE RESPONSIBILITY FOR DAMAGE IF THESE INSTRUCTIONS ARE NOT FOLLOWED PROPERLY.*