



# KINGSLEY BATE

Fine Garden Furniture


## ASSEMBLY INSTRUCTIONS FOR THE PV-50/59

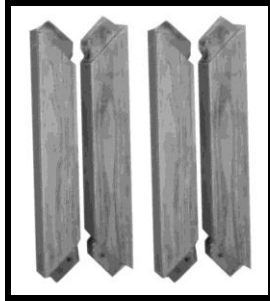


**ANGLE BRACKETS**

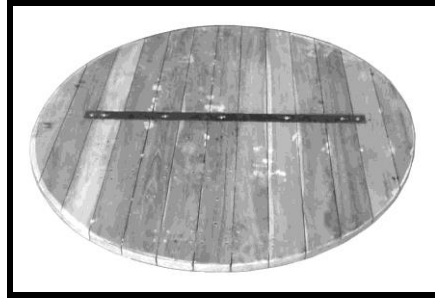

**TABLE TOP**

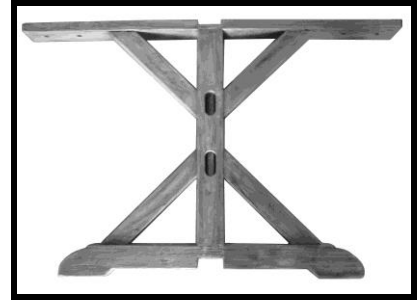


**TABLE BASE**

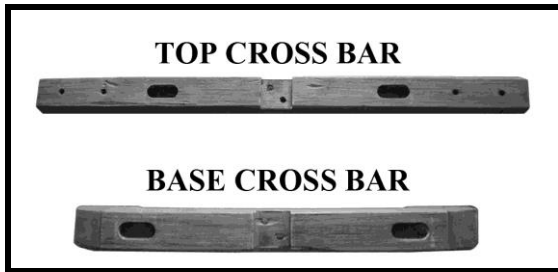


**TOP CROSS BAR**

**BASE CROSS BAR**

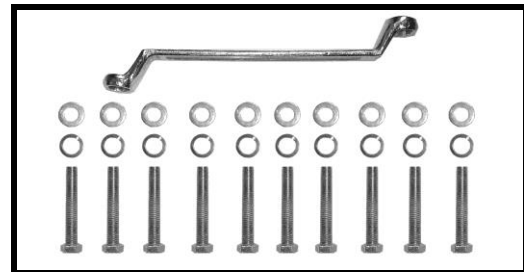


**HARDWARE**

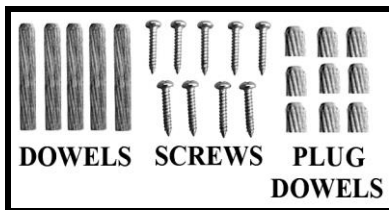

**DOWELS**

**SCREWS**

**PLUG  
DOWELS**

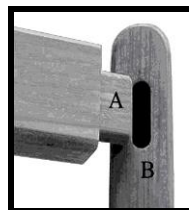

**\* NOTE**



**A TENON**

**B MORTISE HOLE**

### **STEP-I**

Unpack, inspect and lay the parts on a clean, flat, soft surface to avoid marring the wood.




NOTE: During assembly of the furniture please match all joints with the corresponding letters or numbers stamped on the furniture.

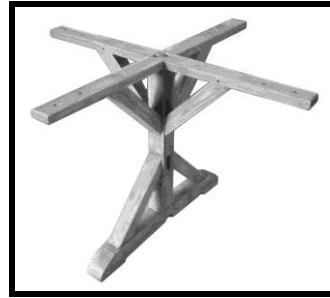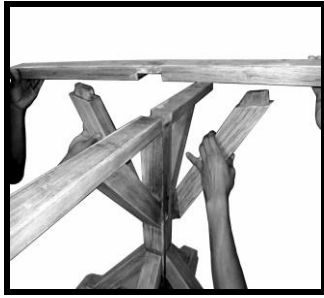

### STEP-II

Upright the TABLE BASE and fit the TOP CROSS BAR along with 2 ANGLE BRACKETS into place as shown in



above photographs (NOTE: This is a two person procedure). Drive the tenons and mortise holes together until all joints fit snugly together.

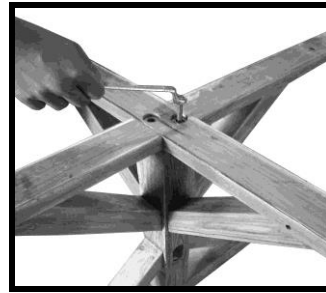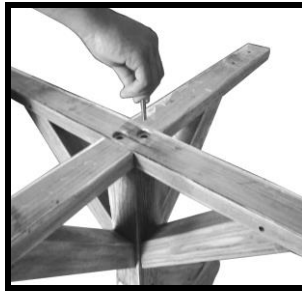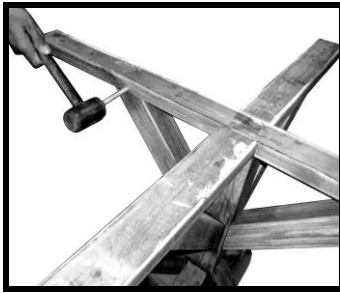

### STEP-III

Drive the wooden dowels through the tenons of the TOP CROSS BAR. It is recommended that you use the wood

sanding block between the hammerhead and the dowel head for the last few blows to avoid marring the wood. **NOTE: Do not force dowels. Any excess can be easily sanded away** Slide the split washer, followed by the flat washer onto the Knock Down Bolts provided and tighten with wrench key provided as seen in photographs.

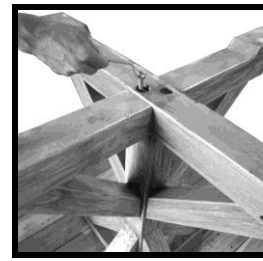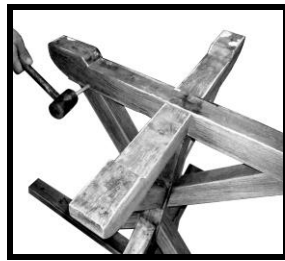

### STEP-IV

Flip table base upside down and repeat STEP-II and STEP-III.



### **STEP-V**

Flip BASE ASSEMBLY right side up and insert screws into respective pre-drilled holes at the ANGLE BRACKETS as shown in the assembly photograph. Do not hammer in the screws, but drive them in with a proper screw driver. Hammer plug dowels into place as shown in assembly

photographs. Drive the wooden dowels through the tenons of the BASE CROSS BAR and ANGLE BRACKETS; to avoid marring the wood we suggest you use a wood block between the hammer head and the dowel head for the last few blows.



### **STEP-VI**

Place the TABLE TOP face down on a clean, soft surface and carefully fit the completed TABLE BASE ASSEMBLY onto the TABLE TOP as shown in photographs (TABLE TOP

and TABLE BASE ASSEMBLY ARE STAMPED FOR EASY LINE UP). Again, slide the split washers, followed by the flat washers onto the Knock Down Bolts provided and tighten with wrench key provided.

NOTE: DO NOT ROLL OVER TABLE TO UPRIGHT. TABLE SHOULD BE LIFTED, ROTATED AND THEN SET DOWN.

IF YOU HAVE ANY QUESTIONS REGARDING THE ASSEMBLY OF YOUR KINGSLEY BATE FURNITURE, PLEASE CONTACT KINGSLEY BATE CUSTOMER SERVICE AT 703-361-7000. WE THANK YOU FOR CHOOSING OUR FURNITURE.

*\*KINGSLEY BATE WILL NOT TAKE RESPONSIBILITY FOR DAMAGE  
IF THESE INSTRUCTIONS ARE NOT FOLLOWED PROPERLY.*