

KINGSLEY~BATE

Fine Garden Furniture

ASSEMBLY INSTRUCTIONS FOR THE SC-25



LIFT OUT TRAY



DRAWERS



TOP FRAME




BOTTOM FRAME




DRAWER FRAME



END FRAME WITH WING

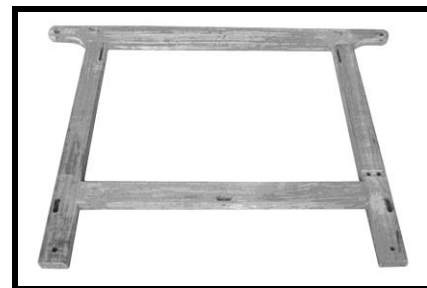

END FRAME W/O WING

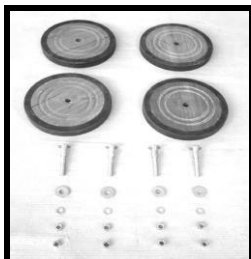


WHEELS



HANDLE BARS

BOTTLE RACK

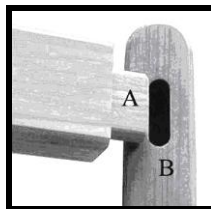

* NOTE

A TENON

B MORTISE HOLE

STEP-I

Unpack, inspect and lay the parts on a clean, flat, soft surface to avoid marring the wood.


NOTE: During assembly of the furniture please match all joints with the corresponding letters or numbers stamped on the furniture.



STEP-II

Find the END FRAME W/O WING (should be the one with numbers stamped on it). Lay this END FRAME down first. Matching the numbers on the END FRAME with those on the TOP FRAME, BOTTOM FRAME, HANDLE BARS and


DRAWER FRAME, BOTTLE RACK carefully line up all parts. Using a rubber mallet, evenly drive all the tenons into the mortise holes as shown in the assembly photos.

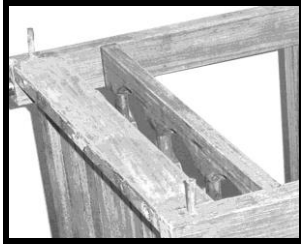

STEP-III



Carefully place & align the END FRAME WITH WING onto the assembled TOP FRAME, BOTTOM FRAME, HANDLE BARS, BOTTLE RACK and DRAWER FRAME. The TOP FRAME has an extension arm with a leather pull attached to it. Please make sure that the leather pull is aligned properly with the routed hole in the END FRAME WITH WING. If the leather strap is folded over you will not be able to pull the extension arm out. Carefully drive the wooden dowels as shown in the diagram.

***NOTE: Before inserting the dowels in the HANDLE BARS you will have to spin them around until you can see the holes line up on both sides. PLEASE MAKE SURE THAT BOTH HOLES LINE UP. NOT DOING SO WILL CAUSE DAMAGE TO THE CART. Drive the wooden dowels into their corresponding holes before flipping the cart around. DO NOT FORCE THE DOWELS FURTHER THAN THEY WILL GO. ANY EXCESS CAN EASILY BE SANDED AWAY.**

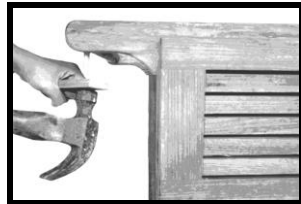

STEP-IV

Gently flip the TROLLY over so that it is upside down. Drive the small dowels into the middle of the TOP FRAME, and under the HANDLE BARS and END FRAMES.

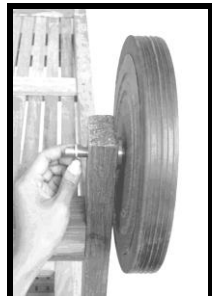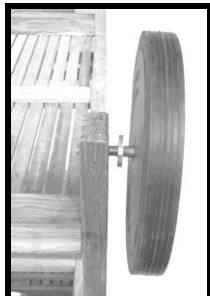

STEP-V

Slide the wheel onto the bolt and then slide the large washer onto the bolt. Now, insert the bolt through the END FRAME leg and slide the second smaller washer onto the bolt. Repeat with other wheel and tighten the two nuts. Do not tighten too hard or the wheels will not turn.



STEP-VI

Slide the drawers into place as shown in the diagram.

IF YOU HAVE ANY QUESTIONS REGARDING THE ASSEMBLY OF YOUR KINGSLEY-BATE FURNITURE, PLEASE CONTACT THE KINGSLEY-BATE DEALER NEAREST TO YOU OR KINGSLEY-BATE DIRECTLY. WE THANK YOU FOR CHOOSING OUR FURNITURE.

**** KINGSLEY-BATE WILL NOT TAKE RESPONSIBILITY FOR DAMAGE IF THESE INSTRUCTIONS ARE NOT FOLLOWED PROPERLY***