

KINGSLEY~BATE

Fine Garden Furniture

ASSEMBLY INSTRUCTIONS FOR THE SH-52/61



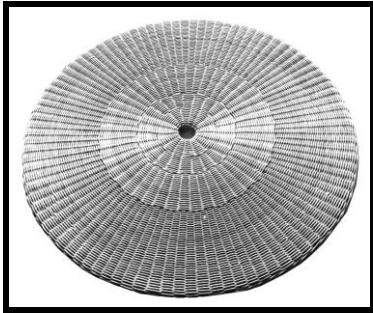



TABLE TOP

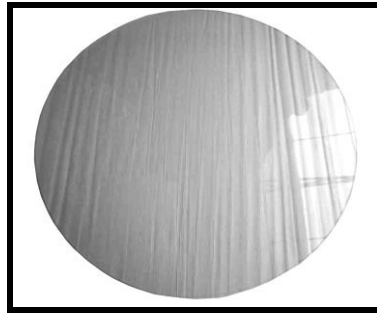


GLASS TOP

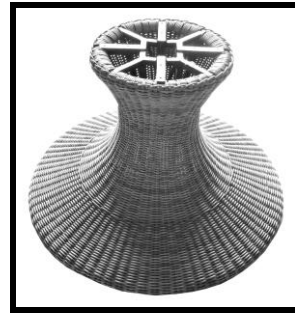

BASE

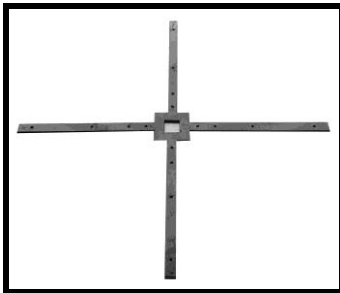



CROSS BRACKET

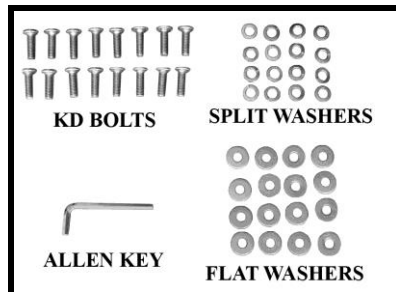

UMBRELLA PLUG

STEP-I

Unpack, inspect and lay the parts on a clean, flat, soft surface to avoid marring the wicker.


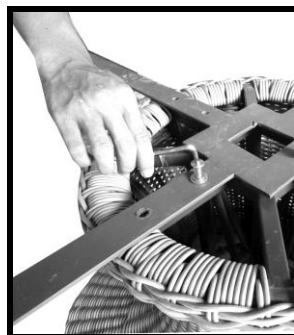
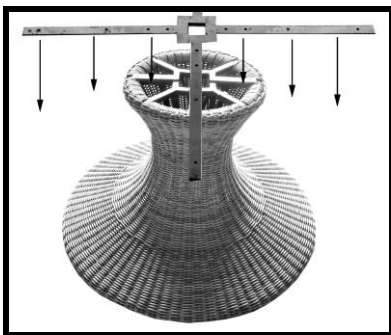


STEP-II

Line up the CROSS BRACKET to the BASE assembly holes using the stickers as guides.


Slide the flat washers followed by the split washers onto the KD (knock-down) BOLTS and secure all KD BOLTS as shown in photographs with the allen key

provided. NOTE: it is easiest if you attach and lightly tighten all bolts first to make sure they catch properly; then evenly tighten them the rest of the way down until completely secure.

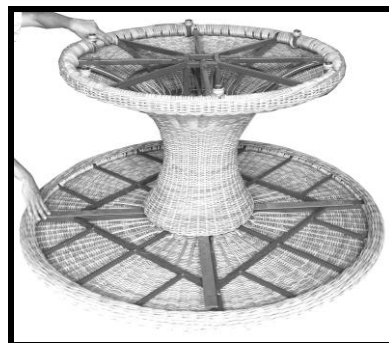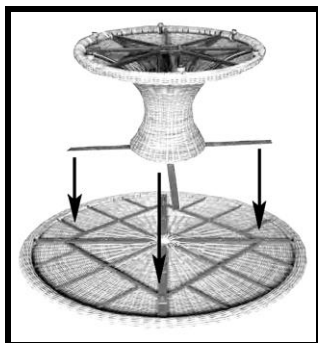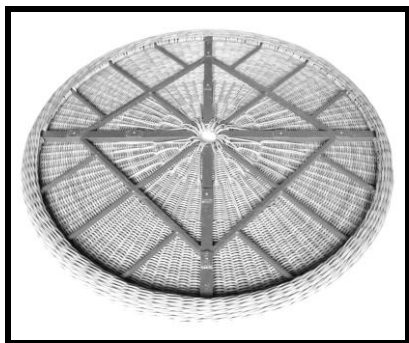

STEP-III

Place the TABLE TOP upside down on a clean, flat surface and flip the BASE over and onto it as shown in the above photographs. Line up the CROSS BRACKET to the TABLE TOP assembly holes using the stickers on both parts.

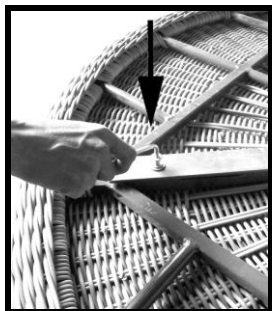

STEP-IV

Slide the flat washers followed by the split washers onto the KD (knock-down) BOLTS and secure all KD BOLTS as shown in photographs with the allen key provided. NOTE: it is easiest if you attach and lightly tighten all bolts first to make sure they catch properly; then evenly tighten them the rest of the way down until completely secure.

IF YOU HAVE ANY QUESTIONS REGARDING THE ASSEMBLY OF YOUR KINGSLEY-BATE FURNITURE, PLEASE CONTACT THE KINGSLEY-BATE DEALER NEAREST TO YOU OR KINGSLEY-BATE DIRECTLY. WE THANK YOU FOR CHOOSING OUR FURNITURE.

** KINGSLEY-BATE WILL NOT TAKE RESPONSIBILITY FOR DAMAGE
IF THESE INSTRUCTIONS ARE NOT FOLLOWED PROPERLY*