

KINGSLEY~BATE

Fine Garden Furniture


ASSEMBLY INSTRUCTIONS FOR THE ST-01




RIGHT END FRAME




ST70

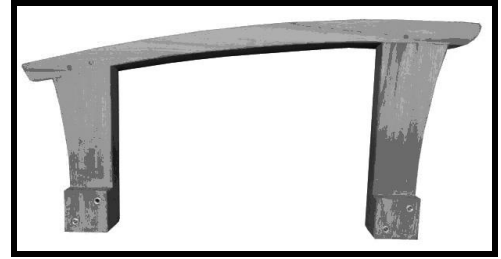

LEFT END FRAME


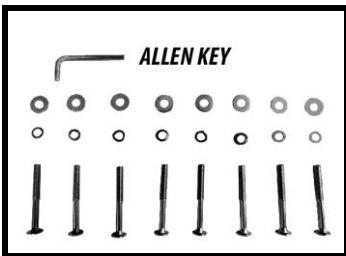


HARDWARE

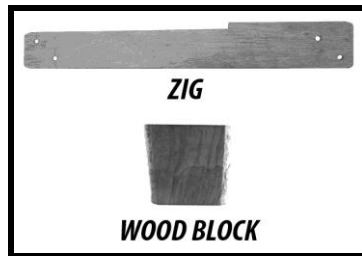


STEP-I

Unpack, inspect and lay the parts on a clean, flat, soft surface to avoid marring the wood.

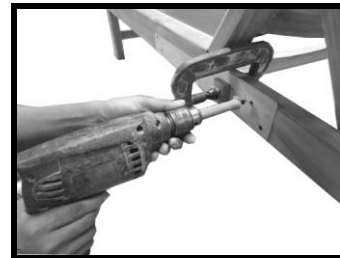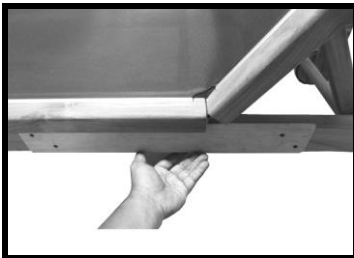

STEP-II

Place the **TEMPLATE** on the chaise body outer side rail as shown in the photograph; **TEMPLATE** will slide into place and push up against **SEAT FRAME**. Use the **WOOD BLOCK** and a standard C Clamp to secure **TEMPLATE** to side frame (wood block is to protect the Teak from the clamp). Drill your holes slowly and evenly using 8mm diameter drill bit.

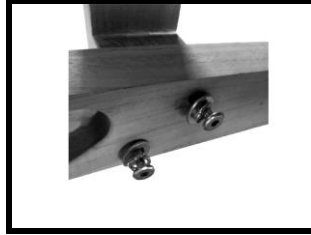

STEP-V

Attach the END FRAMES to the chaise by sliding the split washer, followed by the flat washer onto the knock-down bolts and tighten down using the allen key provided. Please do not over-tighten and do not use a power tool. Power tools can easily over-tighten the bolts causing damage to the item.



IF YOU HAVE ANY QUESTION REGARDING THE ASSEMBLY OF YOUR KINGSLEY-BATE FURNITURE, PLEASE CONTACT THE KINGSLEY-BATE DEALER NEAREST TO YOU OR KINGSLEY-BATE DIRECTLY. WE THANK YOU FOR CHOOSING OUR FURNITURE.

****KINGSLEY-BATE WILL NOT TAKE RESPONSIBILITY FOR DAMAGE IF THESE INSTRUCTIONS ARE NOT FOLLOWED PROPERLY.***