


KINGSLEY BATE™

ELEGANT OUTDOOR FURNITURE

ASSEMBLY INSTRUCTIONS FOR THE TN-55

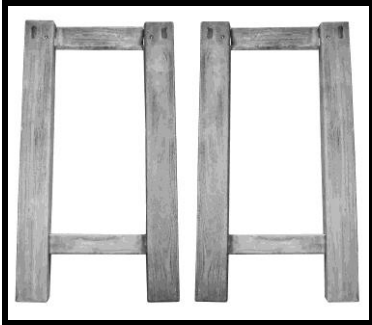

LEG ASSEMBLY



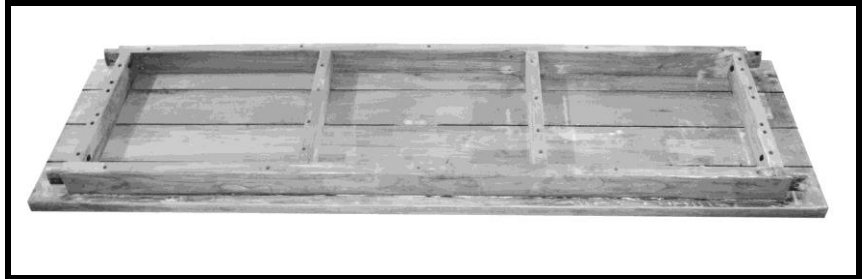


TABLE TOP

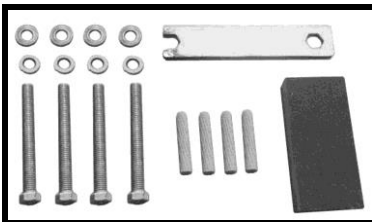

HARDWARE

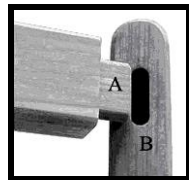

NOTE:


A TENON

B MORTISE HOLE

STEP-I

Unpack, inspect and lay the parts on a clean, flat, soft surface to avoid marring the wood.

NOTE: During assembly of the furniture please match all joints with the corresponding letters or numbers stamped on the furniture.

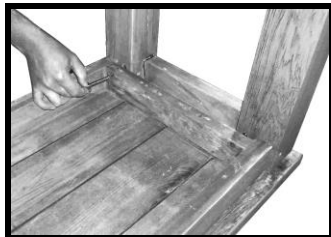

STEP-II

Fit the LEG ASSEMBLY mortise holes onto the TABLE TOP tenons as shown in the photographs. If necessary, gently rock the LEG ASSEMBLY while pushing tenons into the mortise holes until joints fit snugly (use of a rubber mallet may be needed). Make sure to match the numbered tenons with the corresponding mortise holes. Slide the split washers, followed by the flat washers onto the Knock-Down bolts and tighten with wrench key provided, as shown in photographs.



STEP-III

Carefully hammer the dowels into the pre-drilled holes of the assembly, details are shown in the photographs. **NOTE:** To avoid marring the wood please use a block of wood between the hammer head and the dowel head for the last few blows.

IF YOU HAVE ANY QUESTIONS REGARDING THE ASSEMBLY OF YOUR KINGSLEY BATE FURNITURE, PLEASE CONTACT KINGSLEY BATE CUSTOMER SERVICE AT 703-361-7000. WE THANK YOU FOR CHOOSING OUR FURNITURE.

****KINGSLEY BATE WILL NOT TAKE RESPONSIBILITY FOR DAMAGE
IF THESE INSTRUCTIONS ARE NOT FOLLOWED PROPERLY.***