


KINGSLEY – BATE

Fine Garden Furniture


ASSEMBLY INSTRUCTIONS FOR THE TR - 19

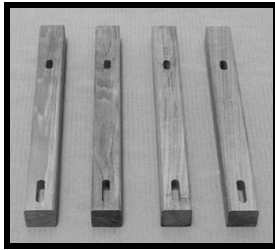


LEGS



TABLE TOP

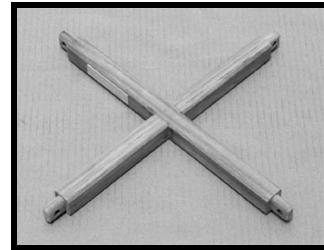

LEG STRETCHER

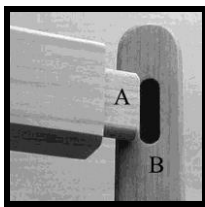

STEP-I

Unpack, inspect and lay the parts on a clean, flat, soft surface to avoid marring the wood.

NOTE: During assembly of the furniture please match all joints with the corresponding letters or numbers stamped on the furniture.

***NOTE:**

A TENON



B MORTISE HOLE



STEP-II

Fit one LEG onto the LEG STRETCHER. Carefully slide the second opposing LEG onto the LEG STRETCHER. Tenons of the LEG STRETCHER will be stamped with a number or letter to correspond with their respective mortise holes on the LEG.


NOTE: DO NOT DOWEL AT THIS TIME.

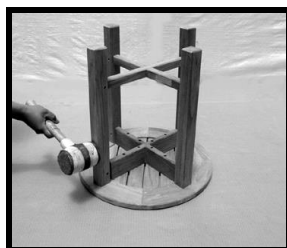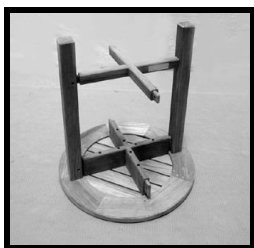

STEP-III

Lay the TABLE TOP on a soft surface with the apron facing up. Fit the assembled LEGS and LEG STRETCHER onto the TABLE TOP. Slide the other two LEGS onto the LEG STRETCHER and the TABLE TOP. Using a rubber mallet or a

regular hammer with a wood block between the hammer and the wood, gently tap all the LEGS until all the joints fit snugly together.

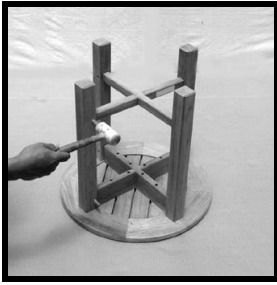

STEP-IV

Drive the wooden dowels through the tenons of the LEGS using direct sharp blows from a hammer. To avoid marring the wood please use a block of wood between the dowel head and the hammer head for the last few blows. Do not force dowels, any excess can easily be sanded away.

IF YOU HAVE ANY QUESTIONS REGARDING THE ASSEMBLY OF YOUR KINGSLEY-BATE FURNITURE, PLEASE CONTACT THE KINGSLEY-BATE DEALER NEAREST TO YOU OR KINGSLEY-BATE DIRECTLY. WE THANK YOU FOR CHOOSING OUR FURNITURE.

**KINGSLEY-BATE WILL NOT TAKE RESPONSIBILITY FOR DAMAGE IF THESE INSTRUCTIONS ARE NOT FOLLOWED PROPERLY.*